

# OPERATING INSTRUCTIONS



**Manufacturer:**

Jonard Tools®

**Product Name:**

Jonard Tools® MDC-64 Large Fiber Optic Duct Cutter (Up to 64 mm)

**Manufacturer Part Number:**

MDC-64


▶ [Click here for more details on the Jonard Tools® MDC-64 Large Fiber Optic Duct Cutter \(Up to 64 mm\)](#)

## MDC-64 Blade Replacement Instructions

1. Remove the hook on the lower part of the handle



2. Unscrew the 2 screws of the rigid handle and remove the grip

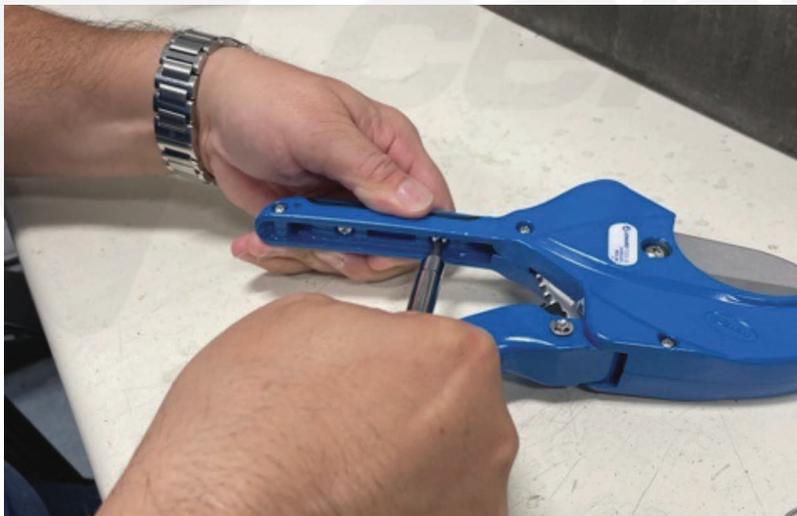

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product specifications and data are subject to change without notice. FOC last update 12/29/2025.

▶ Click here for more details on the Jonard Tools® MDC-64 Large Fiber Optic Duct Cutter (Up to 64 mm)

3. Remove the 5 screws holding the housing together, and remove the faceplate



4. While the faceplate is open, remove the dull blade



**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product specifications and data are subject to change without notice. FOC last update 12/29/2025.

▶ Click here for more details on the Jonard Tools® MDC-64 Large Fiber Optic Duct Cutter (Up to 64 mm)

5. Position the moveable handle so that the pin is situated, and the lever is contacting the spring



6. While holding the moveable handle in place, put the new blade into the housing



**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product specifications and data are subject to change without notice. FOC last update 12/29/2025.

7. Position the torsion spring so that it is contacting the flat part of the back of the blade



8. Fit the faceplate back onto the unit it snaps into place and replace the assembly.



**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product specifications and data are subject to change without notice. FOC last update 12/29/2025.