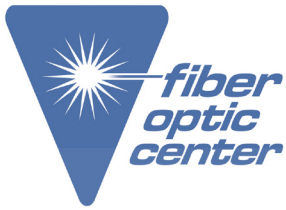


# USER GUIDE

**Manufacturer:**

Dymax


**Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 405nm

**Manufacturer Part Number:**

88855

▶ Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 405nm

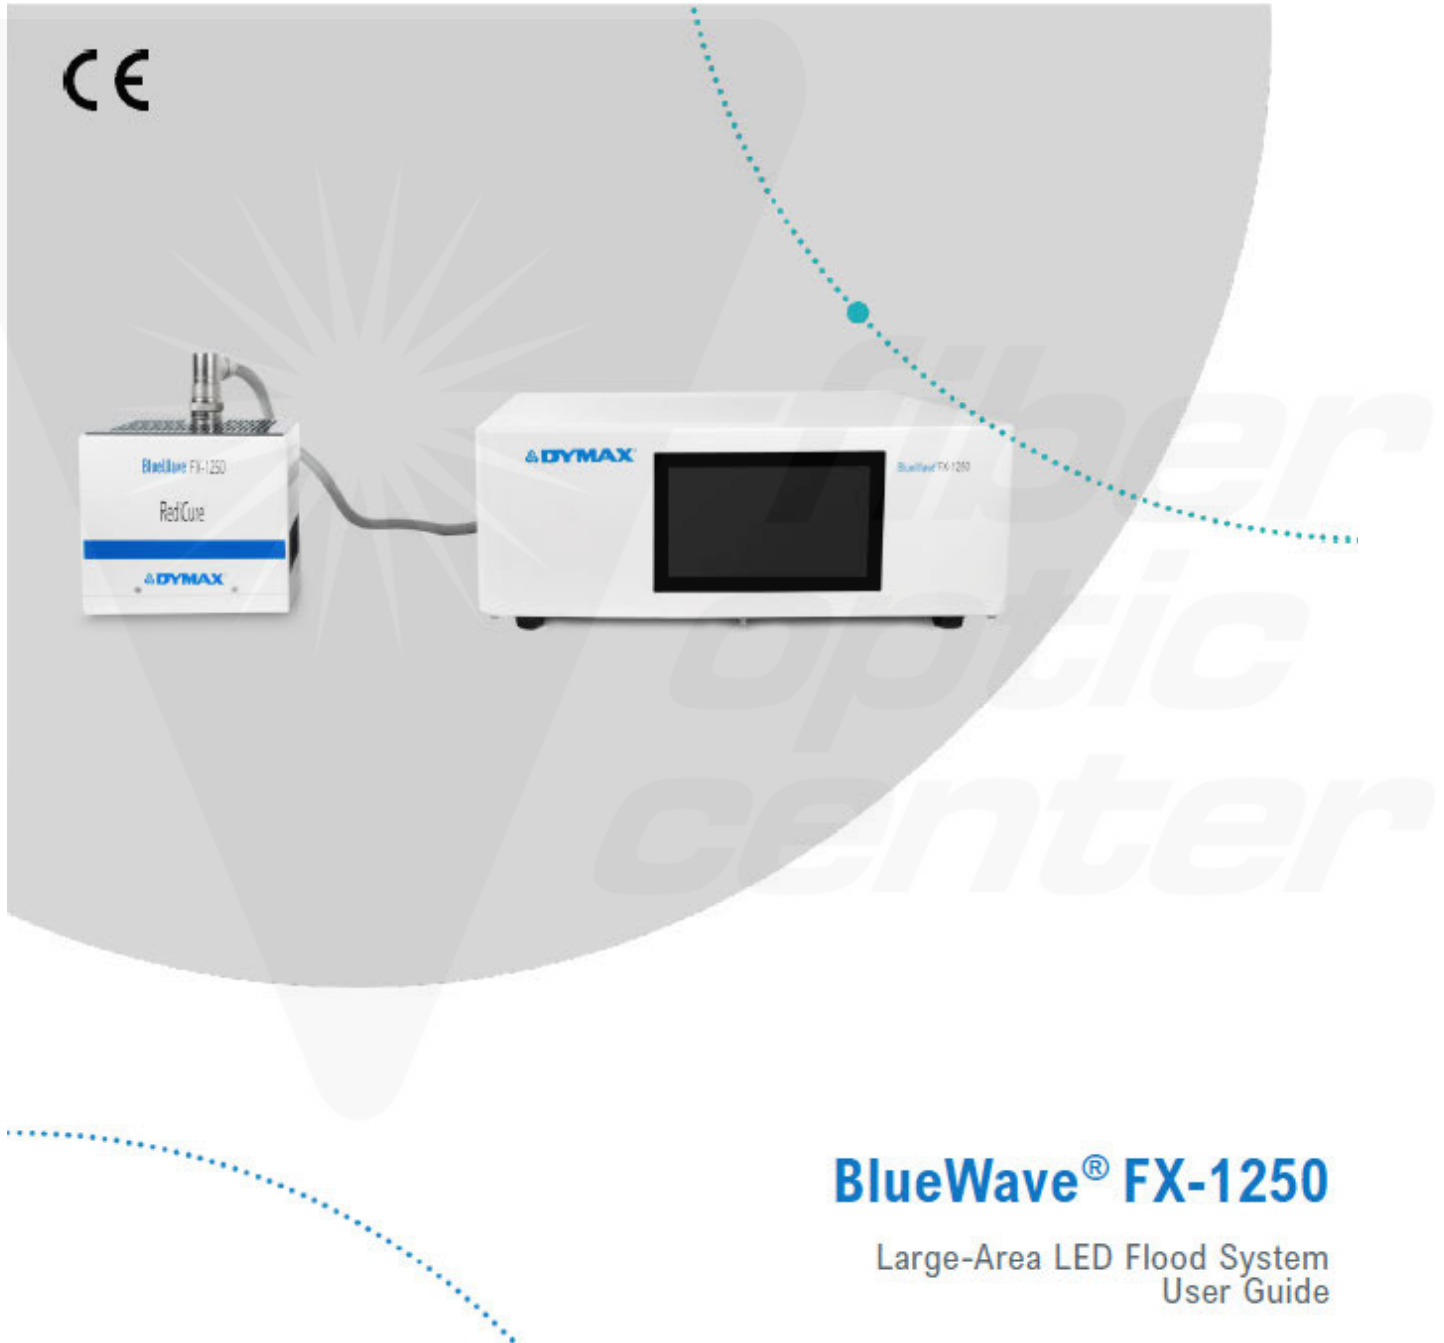

## BlueWave® FX-1250

Large-Area LED Flood System  
User Guide

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 6/12/26.

## Contents

|                                             |    |
|---------------------------------------------|----|
| Introduction.....                           | 4  |
| Intended Audience .....                     | 4  |
|                                             |    |
| Safety.....                                 | 4  |
| Product Overview .....                      | 5  |
| Controller Main Components .....            | 6  |
| Unpacking .....                             | 7  |
| Unpacking and Inspecting Your Shipment..... | 7  |
| Parts Included .....                        | 7  |
|                                             |    |
| System Installation .....                   | 8  |
| System Assembly.....                        | 8  |
| System Cooling.....                         | 8  |
| Wiring and Connections .....                | 9  |
| Connections .....                           | 10 |
| I/O Interface Summary .....                 | 11 |
| PLC UV Control .....                        | 12 |
| Status Output .....                         | 13 |
|                                             |    |
| Operation .....                             | 14 |
| Start Up.....                               | 14 |
| Main Window Settings .....                  | 14 |
| Setting the Power.....                      | 16 |
| Setting the Cure Time.....                  | 16 |
| Running the System.....                     | 16 |
| Program Setting.....                        | 16 |
| Settings .....                              | 17 |
| Brightness.....                             | 17 |
| Clock and Calendar Settings .....           | 18 |
| Resetting the Emitters' LED ON Time.....    | 18 |
| Changing the Password.....                  | 18 |
| System Reset.....                           | 18 |
| System Log .....                            | 19 |
| PLC Mode .....                              | 20 |
| Spare Parts & Accessories.....              | 21 |
| Specifications.....                         | 22 |
| Validation .....                            | 24 |
| Declaration of Conformity .....             | 25 |

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 6/12/26.

## Introduction

This guide describes how to set up, use, and maintain the BlueWave® FX-1250 LED flood-curing system safely and efficiently.

## Intended Audience

This user guide is meant for experienced process engineers, technicians, and manufacturing personnel.

**WARNING!** Under NO circumstances should the interconnect cable from the controller to the LED emitter be connected or disconnected while power to the unit is on. This procedure is usually called "hot swapping" and should not be performed as it could cause damage to the controller or the emitter. Always power down the equipment before disconnecting or connecting any of these devices.

## Safety



**WARNING!** If you use this UV light source without first reading and understanding the information in the **UV Light Safety Guide**, SAF001, injury can result from exposure to high-intensity light. To reduce the risk of injury, please read and ensure you understand the information in that guide before assembling and operating the Dymax UV LED light source.



To use the BlueWave FX-1250 system safely, it must be set up and operated in accordance with the instructions given by Dymax. Using the system in any other manner will impair the protection of the system. Dymax assumes no liability for any changes that may impair the protection of the BlueWave FX-1250 system.

This device falls under IEC 62471 Risk Group 3 for UVA and Blue Light emissions:



**WARNING!** UV emitted from this product. Avoid eye and skin exposure to unshielded products.



**WARNING!** Possibly hazardous optical radiation emitted from this product. Do not look at operating lamp. Eye injury may result.



**WARNING!** Possibly the thermal exhaust hole temperature from emitter will be high, please don't touch the heatsink by hand



**WARNING!** The BlueWave FX-1250 is designed and certified to operate with the Dymax supplied 16 Amp, 1.5 mm<sup>2</sup>, 3 conductor power cord. Do not use any other non-standard power cord.

**WARNING!** The BlueWave FX-1250 is designed and certified to operate as instructed within this document. Alteration of the system or its component installation may pose a shock hazard.

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 6/12/26.

## Product Overview

The BlueWave FX-1250 is a high-intensity LED flood system used for curing light-curable materials. The unit is designed to be integrated into a larger system, such as an automated manufacturing system, or used with a light shielding enclosure to create a bench-top curing station.

The BlueWave FX-1250 can be used for manual and automated process applications and is composed of a controller and LED flood emitter, which is available in three different wavelengths: VisiCure (405 nm), PrimeCure (385 nm), and RediCure (365 nm).

The controller portion consists of an integrated control module and power supply. It allows complete control of an LED emitter, including setting intensity, timing, operation, and programming, while reporting the identity, operating parameters, and status of the emitter. It is designed to be used with any of the three LED emitter wavelengths. It is available in one channel (1CH) and two channel (2CH) configurations. The 2CH supports any two emitters, regardless of wavelength, working at the same time.

|                         |                                                                                      |
|-------------------------|--------------------------------------------------------------------------------------|
| <b>System Name</b>      | BlueWave FX-1250                                                                     |
| <b>Controller Model</b> | BlueWave FX-1250 1CH<br>BlueWave FX-1250 2CH                                         |
| <b>Emitter Model</b>    | BlueWave FX-1250 RediCure<br>BlueWave FX-1250 PrimeCure<br>BlueWave FX-1250 VisiCure |

The BlueWave FX-1250 functions as a flood-curing system with a 127 mm x 127 mm (5 in x 5 in) irradiated curing area.

The unit can be operated in admin mode (unrestricted control) or production mode (restricted control) which allows for process management via access restrictions.

The unit can be controlled as well by Programmable Logic Controller (PLC) for automation applications.

LED technology within the BlueWave FX-1250 LED Flood System allows for instant on/off activation without the need for a warm-up period and is also rated for continuous operation.

**Figure 1.**  
BlueWave FX-1250 LED Flood Curing System



**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 6/12/26.



## Controller Main Components

The interactive parts of the controller include the Display Screen, Power Switch, Power Input Receptacle, Output CH1, Output CH2, RS232 Receptacle, RS485 Receptacle and PLC Interface.

**Figure 2**  
Controller Front Panel



**Display Screen:** Controls the operation of the controller and displays the operation parameters.


**Power Switch:** Controls the controller's power.

**Power Input Receptacle:** Used to connect the power cord.

**Output CH 1, CH2:** Used to connect the interconnect cable. There is no difference between the two receptacles, and they can be connected interchangeably.

**RS485 & RS232 Receptacle:** Used to communicate with a UVCS V3.0 conveyor. No connection is required when the controller is used alone.

**Figure 3**  
2CH Controller Back Panel

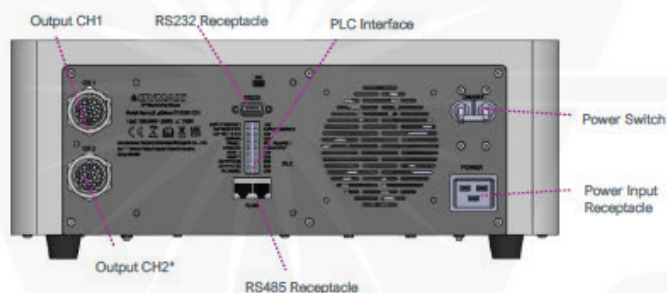

\*Note: Figure 3 is of a 2CH controller. 1CH controllers do not have Output CH2

**Table 1.**  
Labels

| Warning Labels                                                                                                                                                                                                                                  | Product Information Label                                                           | High Temperature Caution Label                                                        | Emitter Wavelength Label (RediCure, PrimeCure, or VisiCure)                           |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|  <p><b>RISK GROUP 3</b></p> <p><b>CAUTION:</b> UV emitted from this product. Eye or skin irritation may result from exposure. Use appropriate shielding.</p> |  |  |  |

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 6/12/26.

## Unpacking

### Unpacking and Inspecting Your Shipment

Upon arrival, inspect all boxes for damage and notify the shipper of box damage immediately. Open each box and check for equipment damage. If parts are damaged, notify the shipper and submit a claim for the damaged parts.

The parts below are included with your purchase configuration.

Inspect the glass for any damage or residue on the surface. Carefully clean the glass with the alcohol swab. Take care not to touch the glass with bare hands, as any residue left on the window can adversely affect performance on the unit.

### Parts Included

*The parts below are included with your purchase configuration*

#### Controller Only\*

- BlueWave FX-1250 1CH or 2CH Controller (model as selected at time of purchase)
- Power Cord
- BlueWave FX-1250 LED Flood System User Guide
- UV-Light Safety Guide (SAF001)
- Terminal Block (attached to the controller, but not plugged in, with jumper wires installed)
- Footswitch
- Safety Eyewear

#### Emitter Only\*

- BlueWave FX-1250 Emitter (RediCure, PrimeCure, or VisiCure, model as selected at time of purchase)
- UV-Light Safety Guide (SAF001)


*\* Orders of individual controllers and emitters must purchase interconnect cables separately.*

#### Complete Kit

- All parts listed above included  
**Note:** only the 1CH Controller is available in a Complete Kit
- Interconnect Cable (Type I&L)

**Figure 4.**

Components of a BlueWave FX-1250 -Controller Only  
88804/88805/88846/88847/88850/88851

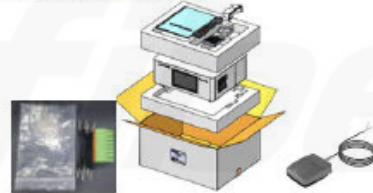

**Figure 5.**

Components of a BlueWave FX-1250 -Emitter Only  
88801/88802/88803



**Figure 6.**

Components of a BlueWave FX-1250 - Complete Kit  
88848/88856/88859/88849/88857/88860/88855/88858/88861



**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 6/12/26.

## System Installation

### System Assembly

The system includes two major parts, the controller and emitter. The two parts are shipped separately.

To assemble the two parts together, plug one side of the interconnect cable into the controller and the other side into the emitter (Figure 7).

**NOTE:** Be careful to keep the glass at the bottom of the emitter clean. To avoid leaving fingerprints on the glass, do not touch the glass with bare hands.



**WARNING!** The BlueWave FX-1250 is designed and certified to operate as instructed within this document. Alteration of the system or its component installation may pose a shock hazard.

Figure 7.  
Interconnect Cable Installed




### System Cooling

The system can be used in various scenarios with additional mounting fixtures or Dymax accessories, i.e., as a bench-top unit with a stand on a chamber, as part of a conveyor, etc. This system should only be operated in a location that provides proper cooling. Location requirements are as follows:

- For proper cooling of the unit, upper intake and lower exhaust must not be blocked.
- Minimum recommended clearance is 8 inches [200 mm].
- Note that the lower exhaust may have one side blocked for installations where two units are side by side. The system will operate safely but run hotter.

Figure 8.  
Recommended Cooling Clearance

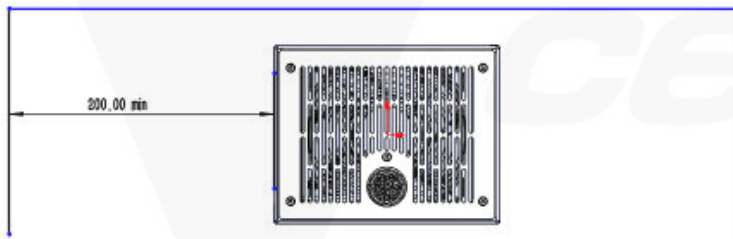

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA


Product data subject to change without notice. FOC last update 6/12/26.



## Wiring and Connections

All the wire and cable connections are located on the rear of the controller or the top of emitter.

**Figure 9.**  
Controller Connections

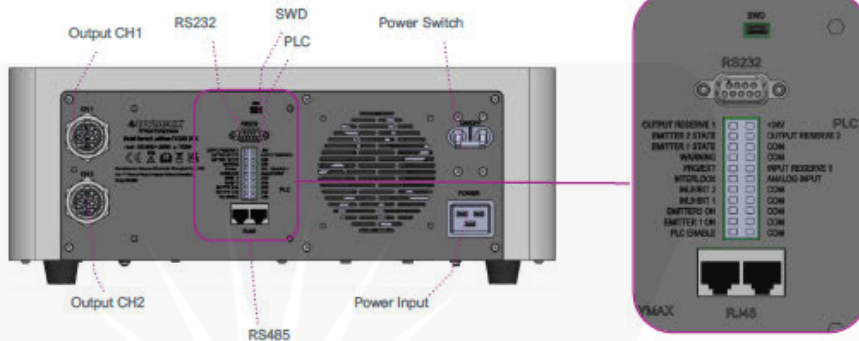

**Power Switch:** Turns the unit on and off.

**Power Input:** The power cord plugs in here. Only use the power cord supplied by Dymax (Figure 10) as the power cord supplied with the controller is specifically designed and certified to work with the controller.



**WARNING!** The BlueWave FX-1250 is designed and certified to operate with the Dymax supplied 16 Amp, 1.5 mm<sup>2</sup>, 3 conductor power cord. Do not use any other non-standard power cord.

**Figure 10.**  
Power Cord



**Figure 11.**  
Interconnect Cable for Output Channels 1 & 2  
84025/84026



**Output CH1/CH2:** Output power and control signal to emitter. Only use the interconnect cable made by Dymax (Figure 11) as this interconnect cable is specifically designed for this system. One controller in 2CH configuration can support up to two emitters at the same time.

**SWD:** Burn in or update the software into controller.

**RS232:** Conduct communication to computer.

**PLC:** Controlled by PLC program.

**RS485:** Controlled by internet.

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA



## Connections

The interconnect cable has two 15P plugs that connect the controller to the emitter.

**Plugging the interconnect cable into the controller:** Roll the plug clockwise while inserting to plug the cable in. Roll the plug counterclockwise while removing to unplug the cable (Figure 12).

**Plugging the interconnect cable into the emitter:** Roll the plug clockwise while inserting to plug the cable in. Roll the plug counterclockwise while removing to unplug the cable (Figure 13).

**Figure 12.**  
Plug Interconnect Cable into Controller



**Figure 13.**  
Plug Interconnect Cable into Emitter



**Figure 14.**  
Key (Left) and Keyway (Right)




**Attention:** When plugging in the female and male connectors, observe the key and keyway of each connector. The key should align with the keyway (Figure 14).


### Plugging the footswitch or light shield into the controller:

1. Using a jumper wire, connect PLC ENABLE (Input Pin 1) to the opposite COM port (2).
  2. Using a jumper wire, connect the INHIBIT (Input Pins 7, 9) for each emitter being used to its opposite COM port.
  3. Connect the footswitch or light shield into the EMITTER ON (Input Pins 3, 5) for each channel into its opposite COM port.
- To control two emitters with a single footswitch, jumper both INHIBITS, and the EMITTER 2 ON, then plug the footswitch into EMITTER 1 ON and the opposite COM port.

**Figure 15.**  
Plug Footswitch into Controller

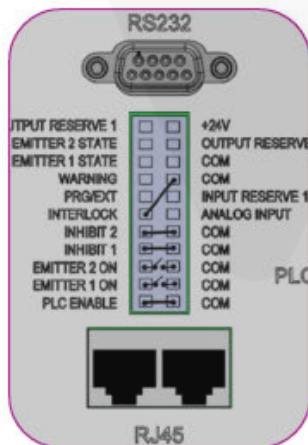

**Figure 16.**  
Example: Footswitch Connection

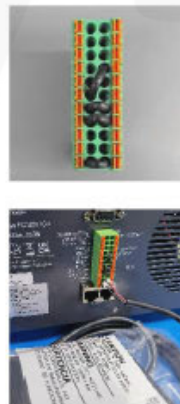

**Note:** The Input/Output terminal block is included in the packaging, with the jumper wires inserted. When the terminal block is installed, the controller will enter PLC mode. PLC mode disables commands and parameter setting from the HMI. To set parameters from the HMI, the terminal block must be removed, or the connection between the PLC Enable and COM pins (1 and 2) must be disconnected.

To allow setting of parameters by analog input: start with the standard installation described for the footswitch and light shield. Add an additional jumper between PRG/EXT (13) and COM (18). Connect to Analog Input (12) and COM (16) for input and +24V (22) and COM (18) to add 24V power.

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

## I/O Interface Summary

Table 2 below shows the summary of all signals on the PLC Connector.

**Table 2.**

I/O Interface

| Signal Name / Description                                                     | PIN #            | Signal Level    |             |
|-------------------------------------------------------------------------------|------------------|-----------------|-------------|
|                                                                               |                  | Asserted        | De-Asserted |
| INPUTS                                                                        |                  |                 |             |
| Input Reserve 1                                                               | 14               | Do Not Use      |             |
| ANALOG INPUT                                                                  |                  |                 |             |
| Only used in PLC EXT mode                                                     | 12               | 0 – 10 VDC      | N/A         |
| Sets Emitter intensity level (0~1V=0% output, 1V=10% output, 10V=100% output) |                  |                 |             |
| INTERLOCK                                                                     | 11               | 0 VDC, GND      | (Open)      |
| PLC ENABLE                                                                    | 1                | 0 VDC, GND      | (Open)      |
| Emitter 1 ON                                                                  | 3                | 0 VDC, GND      | (Open)      |
| Emitter 2 ON                                                                  | 5                | 0 VDC, GND      | (Open)      |
| PRG/EXT                                                                       | 13               | 0 VDC, GND(EXT) | (Open)(PRG) |
| INHIBIT 1                                                                     | 7                | 0 VDC, GND      | (Open)      |
| INHIBIT 2                                                                     | 9                | 0 VDC, GND      | (Open)      |
| OUTPUTS                                                                       |                  |                 |             |
| PLC POWER <sup>(1)</sup><br>(24V, 50mA maximum)                               | 22               | Always On       |             |
| WARNING                                                                       | 15               | 0 VDC, GND      | Open        |
| EMITTER 1 STATE                                                               | 17               | 0 VDC, GND      | Open        |
| EMITTER 2 STATE                                                               | 19               | 0 VDC, GND      | Open        |
| Output Reserve 1, Output Reserve 2                                            | 21,20            | Do Not Use      |             |
| RETURNS (These pins are common and may be used interchangeably)               |                  |                 |             |
| COM                                                                           | 2,4,6,8,10,16,18 | Common Grounds  |             |

(1) PLC power channel is a 24V source available for use to drive PLC logic but must be current limited using pull-down resistors to protect the BlueWave FX-1250 when directly attached to the I/O channels through the PLC connector.

(2) CHASSIS Ground connections do not share a common connection with signal returns and cannot be interchanged with signal returns.

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 6/12/26.

## PLC UV Control

PLC switching may be driven by manual switch, relay, or optical coupler. Only analog intensity uses a voltage input to the PLC.

To use the PLC mode, the **PLC ENABLE** (input pin 1) must be pulled down to low by grounding to the **COM** ground point

The **PLC INTERLOCK** (input Pin 11) disables all the UV output when it is de-asserted. It is pulled down before other control signal in PLC mode.

The **PLC INHIBIT 1** (input Pin 7) and **INHIBIT 2** (input Pin 9) disables each channel's UV output when it is de-asserted. After the **INTERLOCK** is pulled down, the **INHIBIT 1** or **INHIBIT 2** is also pulled down.


After above signals are pulled down, the PLC can control the UV on/off using the Emitter 1 ON (input Pin 3) or Emitter 2 ON (input Pin 5). When this input is pulled down by grounding to **COM** ground, the UV LED will turn on.

The PLC can also control the intensity of the UV output.

- When the **PRG/EXT** (input Pin 13) is pulled down low by grounding to **COM** ground, the Intensity will be controlled by the **EXTERNAL ANALOG INTENSITY** input voltage.
- The **ANALOG INPUT** (input Pin 12) is an analog voltage input. The voltage range is 0 to 10VDC.

Any setting below 1 VDC will set the Intensity to 0% and each 1V additional volt increases intensity by 10%. (Example: 1V = 10%, 5V = 50%, 10V = 100%). The example connection for the PLC control signal is shown in Figure 17.

**Figure 17.**  
PLC Connection Example

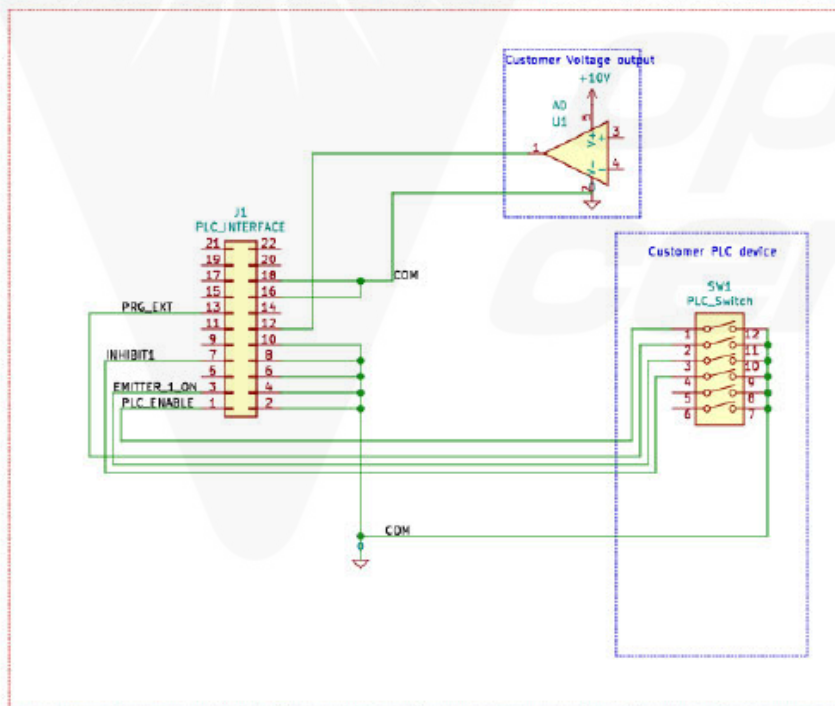

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**


[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA


Product data subject to change without notice. FOC last update 6/12/26.



**Figure 18.**  
Typical Application 1

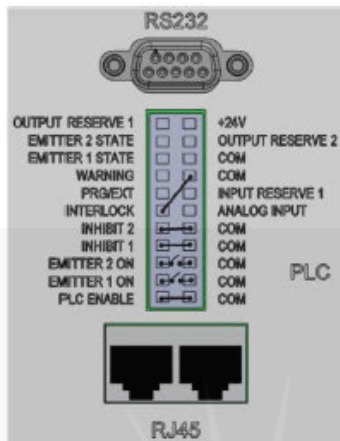

**Figure 19.**  
Typical Application 2

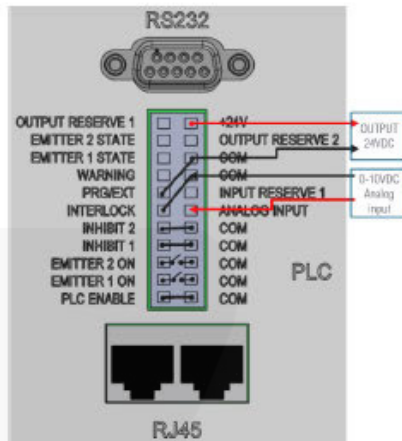

**Note:** The Input/Output terminal block is included in the packaging, with the jumper wires inserted. When the terminal block is installed, the controller will enter PLC mode. PLC mode disables commands and parameter settings from the HMI. To set parameters from the HMI, the terminal block must be removed, or the connection between the PLC Enable and COM pins (1 and 2) must be disconnected.

## Status Output


There are three status outputs. They are driven by an optical coupler. These outputs work in any mode and can be used as status inputs for PLC or any status display/monitor purpose.

- **WARNING** - Output low indicates the unit is working normally.
- **Emitter 1 & 2 State** - Output low indicates the UV LEDs are ON.


An example application of these signals is shown in Figure 20.

PLC Power channel is a 24V source available for use to drive PLC logic but must be current limited using pull-down resistors to protect the FX-1250 when directly attached to the I/O channels through the PLC connector. The support current is 50 mA max.

**Figure 20.**  
Status Outputs Connection Using On-Board 24V Source

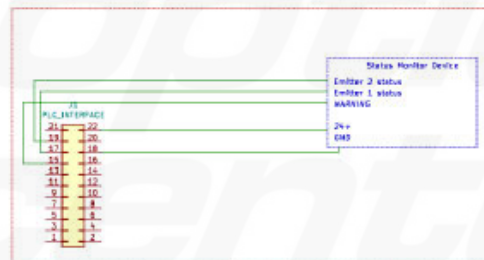

**Figure 21.**  
PLC Status Outputs Using Customer-Supplied 24V Source

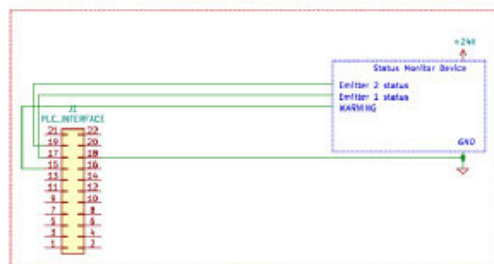

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)


23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 6/12/26.



Figure 22.

Examples of Customer Configurations for Monitoring Outputs

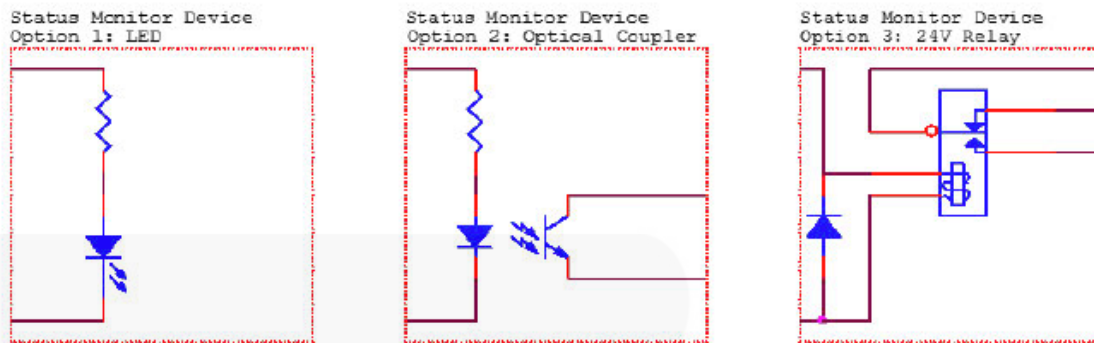

## Operation

### Start Up

1. Verify all connectors are firmly plugged into the rear panel of the BlueWave FX-1250 controller and emitter.
2. On the rear panel of the controller, move the power switch to the ON position (up direction).
3. The start-up window (Figure 23) will appear for several seconds as the system initializes.

Figure 23.  
Start-Up Window



### After starting up, the main window (Main Window Settings)

In the main window, the operator can:

1. Set each channel's power and cure time.
2. Start or stop each channel or all channels.
4. Figure 24) appears.

**WARNING!** Emitters must be installed correctly before power up. If no emitter is installed, the controller is not operable. Power off the controller and install at least one emitter.

5. The system is now ready to have emitter parameters set.

### Main Window Settings

In the main window, the operator can:

3. Set each channel's power and cure time.
4. Start or stop each channel or all channels.

Contact the professionals at Fiber Optic Center for a quote or to get more details.

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 6/12/26.

Figure 24. Main Window

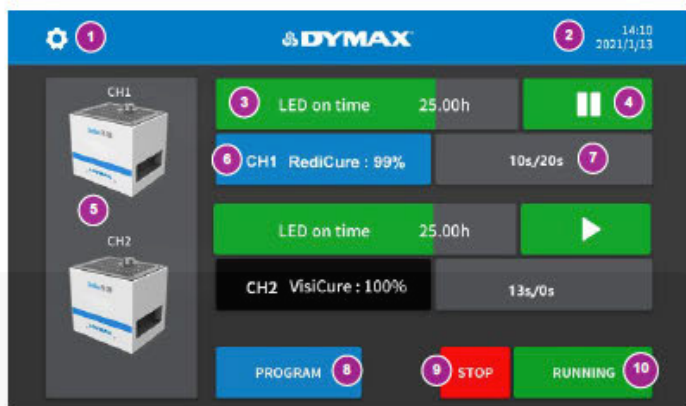


Table 3. Main Window Functions

| Number | Name                  | ICON | Description                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------|-----------------------|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1      | System setting        |      | Press to enter the system setting window to set the system parameters (clock, calendar, password, LED on time, brightness).                                                                                                                                                                                                                                                                                    |
| 2      | Calendar and clock    |      | Display clock and calendar.                                                                                                                                                                                                                                                                                                                                                                                    |
| 3      | Progress bar          |      | If the cure time is not zero, the green bar increases to indicate the progress of a cure time count.<br>If the cure time is zero, the green bar does not increase.<br>LED on time displays the total time the LED has been on.                                                                                                                                                                                 |
| 4      | Play/Stop button      |      | Each channel controls one emitter.<br>The green color indicates the emitter is on.<br>▶ is pressed to start the emitter.<br>⏸ is pressed to stop the emitter.<br>The red indicates the emitter is off when you just plug one emitter.<br>The dark grey indicates no emitter is plugged in. Power off the controller to install an emitter.<br>The red and dark grey play button have no function when pressed. |
| 5      | Emitter & parameters  |      | Each channel can be connected to an emitter. It displays the channel number on top.                                                                                                                                                                                                                                                                                                                            |
| 6      | Power and type button |      | Displays the channel number, emitter type, power set.<br>The display will be one of four colors:<br>Blue – RediCure,<br>Black – VisiCure<br>Grey – PrimeCure<br>Red – NA<br>Press to set the power of this channel.<br>If no emitter is plugged in, the channel displays NA.                                                                                                                                   |
| 7      | Timer                 |      | Counts down to zero if the cure time is not zero.<br>Counts up if the cure time is zero.<br>Press to set the cure time.                                                                                                                                                                                                                                                                                        |
| 8      | Program               |      | Press to save and load stored setting parameters.                                                                                                                                                                                                                                                                                                                                                              |
| 9      | Stop button           |      | Press to stop all emitters.                                                                                                                                                                                                                                                                                                                                                                                    |
| 10     | Run button            |      | Press to start all emitters. When at least one of the emitters is on, the 'RUN' turns to 'RUNNING'.                                                                                                                                                                                                                                                                                                            |

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 6/12/26.

## Setting the Power

The operation steps are:

1. On the main window, press the power button (Table 3, #6) to enter the power window (Figure 25).
2. Enter the desired value using the pad and press enter. (10%~100%). The new value will display in the bar.
3. If no change is needed, press the back arrow in the top left corner to exit the power window.

Figure 25.  
Power Window



## Setting the Cure Time

1. On the main window, press the timer (Table 3, #7) to enter the cure time window (Figure 26).
2. Enter the desired value using the pad and press enter. (0-9999 seconds). The new value will display in the bar.


Set the cure time to 0 sec. to run the emitter until it is manually stopped.

Set a value greater than 0 sec. to run the emitter automatically for that duration.

Cure times can be set in intervals of 0.1 sec.

3. If no changes are needed, press the back arrow in the left top corner to exit the cure time window.

Figure 26.  
Cure Time Window

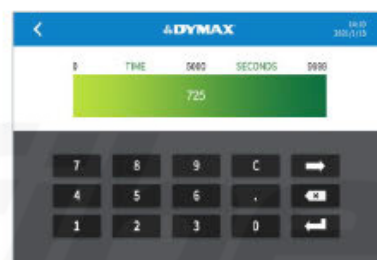

## Running the System

1. After power and cure time have been set, the emitters can be run.
2. Each emitter channel can be operated separately using the play/stop button (Table 3, #4) on the main window.
3. To operate all emitter channels together, the run (Table 3, #10) and stop (Table 3, #9) buttons on the main window can be used to start and stop the emitters.

## Program Setting

To save your set values in the main window, press program (Table 3, #8) on the main window to enter the program setting window. You are required to enter the user's password correctly before the program window loads.

There are 16 slots for selection. Their default names are Program # (1-16). Only one slot can be selected at a time.

The operation steps are:

1. Press on a program slot. The program slot will change to blue when selected. The parameters stored in that program slot will display in the white bar.
2. Press the Rename button to rename the slot.
3. Press the Save button to save the current set values (channel number, power, and cure time) to that program slot.
4. Press the Load button to load the slot's value and exit to the main window.
5. Press the Delete button to erase a slot's name and set the stored values of the slot to 0.
6. Press the back arrow in the top left corner to exit the program window.

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 6/12/26.




## Settings

Press the system setting button  on the main window. A password input window (Figure 27) will appear. The password must be entered to enter the System Settings window.

Press the input bar on the password input window to activate the keyboard (Figure 28).

The default password is set to "1234".

**Figure 27.**  
Password Input Bar

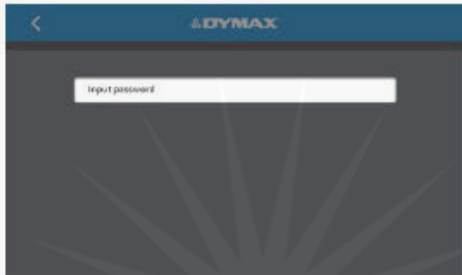


**Figure 28.**  
Keypad for Password Window



Once the password is entered, the System Settings window (Figure 30) will appear.

**Figure 29.**  
Program Window

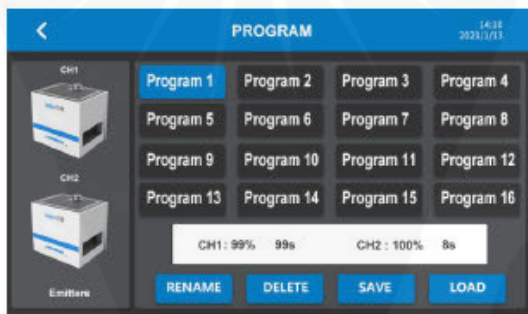

**Figure 30.**  
System Settings Window



**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](https://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 6/12/26.

## Brightness

1. On the system settings window, press on the brightness dropdown button (Error! Reference source not found.).
2. Move the bar up and down to adjust the brightness of the screen.
3. Press the back arrow in the left top corner to exit.

## Clock and Calendar Settings

1. On the system settings window, press the time dropdown arrow.
2. Press the clock in the window to input the date and time by using the pad.
3. Press the back arrow on the top left to exit.

## Resetting the Emitters' LED ON Time

The emitter on time appears in the gray bar (Figure 33) on the System Settings window.

Once the emitter is on, the LED on time will begin counting.

If an emitter is changed for a channel, the LED on time must be cleared for it to recount in that channel.

Press the Reset button located to the right of the emitter LED on time to clear it.

## Changing the Password

1. Press the change Password button on the system settings window to enter the Change Password window.
2. Press New Password to input the new password.
3. Press "Confirm New Password" and input the new password again. The two input passwords must be the same.
4. Press the back arrow in the left top corner to exit.

## System Reset

Press the System Reset button on the System Settings window to:

- Reset the password to the default:1234
- Reset the program names and values to the default

Figure 31.  
Brightness Adjustment Bar



Figure 32.  
Clock and Time Input Pad

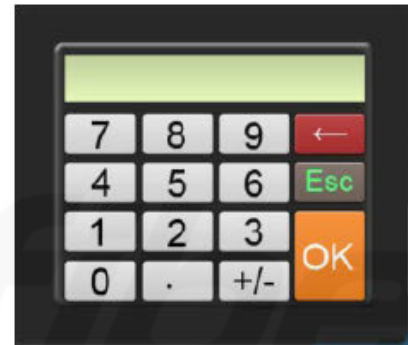


Figure 33.  
Emitter On Time

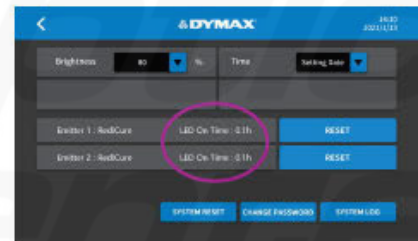


Figure 34.  
Change Password Window



**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 6/12/26.

## System Log

### Checking the Alarm History Log

To check the alarm history log, press the Alarm Log window. The error window will appear (Figure 35).

*Note: The alarm records are only updated. They can't be deleted. The lines show the date and time of the alarm, and the code to describe the reason for the alarm.*

The controller can save a maximum of 100 records. When over 100 alarms have been recorded, the next number is overlaid by the new alarm.

Press the Back arrow to return to the main window.

### When the Controller Alarms

When the controller alarms, the controller is forced to enter the Alarm window. The Alarm button appears in the bottom. Press the Turn Off Button (Figure 36) to enter the Alarm Log window.

After the alarm code is checked, press the Back arrow to return to the main window.

An alarm icon will appear on the left of the stop button. Navigate to the log window directly by pressing the button. (Figure 37)

When an alarm occurs, the emitters are stopped, and the controller emits a beep.

Press the Reset button to turn off the beep and disable the alarm.

**WARNING!** Power off before checking the controller and emitters.

When any emitter's temperature is over 60°C, a warning screen pops up (Figure 38). It is a warning message only.

Press the Turn Off Button to close the warning screen. The warning will also automatically close when the emitter temperature returns to 60°C.

The emitter will automatically shut down if the maximum allowable temperature is reached.

Figure 35.  
Error Window



Figure 36.  
Alarm Button



Figure 37.  
Main Window with Alarm Button

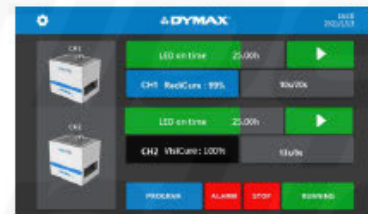


Figure 38.  
High Temperature Warning Screen



Table 4.  
Alarm Codes and Description

| Alarm Code | ALARM message                        | Cause                                           |
|------------|--------------------------------------|-------------------------------------------------|
| 0x1000     | Ctrl Over Temperature (>50°C)        | The controller temperature is too high.         |
| 0x2000     | EM x (1,2) not installed             | Emitter connection has problems after power up. |
| 0x2001     | EM x (1,2) fan error                 | Emitter fan has no speed.                       |
| 0x2002     | EM x (1,2) over temperature (> 69°C) | Emitter temperature is too high.                |
| 0x2003     | EM x (1,2) over current              | Emitter current is too high.                    |
| 0x2004     | EM x (1,2) zero output               | Emitter has no current output.                  |

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA



## PLC Mode

There are 2 working modes:

**Program:** This is the default mode and is operable by the touch screen. Parameters can be stored in the program slots and called for operation. The parameters can be stored in the program slots and called for operation. This is the default mode for the touchscreen.

**PLC:** The system can be controlled by PLC. This mode is triggered by the PLC ENABLE input signal. Please follow the wiring guide in "PLC UV Control" on page 12.

Once the PLC mode is on, the PLC mode window (Figure 39) displays.

Figure 39.  
PLC Mode Window

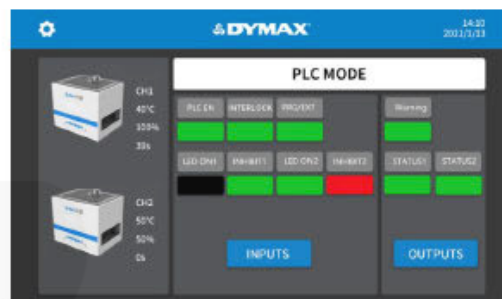


Table 5.  
PLC Mode Signals

| Signal Name / Description | Pin #                                                                               | Signal Color                                                                                                                                                          |             |
|---------------------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|
|                           |                                                                                     | Asserted                                                                                                                                                              | De-Asserted |
| INPUTS                    |                                                                                     |                                                                                                                                                                       |             |
| INTERLOCK                 | 11                                                                                  | GREEN                                                                                                                                                                 | RED         |
| PLC ENABLE                | 1                                                                                   | GREEN                                                                                                                                                                 | RED         |
| LED ON1                   | 3, Emitter 1 ON                                                                     | GREEN                                                                                                                                                                 | BLACK       |
| LED ON2                   | 5, Emitter 2 ON                                                                     | GREEN                                                                                                                                                                 | BLACK       |
| PRG/EXT                   | 13                                                                                  | (EXT), GREEN                                                                                                                                                          | (PRG), RED  |
| INHIBIT 1                 | 7                                                                                   | GREEN                                                                                                                                                                 | RED         |
| INHIBIT 2                 | 9                                                                                   | GREEN                                                                                                                                                                 | RED         |
| OUTPUTS                   |                                                                                     |                                                                                                                                                                       |             |
| WARNING                   | 15                                                                                  | GREEN                                                                                                                                                                 | RED         |
| STATUS 1                  | 17, EMITTER 1 STATE                                                                 | GREEN                                                                                                                                                                 | BLACK       |
| STATUS 2                  | 19, EMITTER 2 STATE                                                                 | GREEN                                                                                                                                                                 | BLACK       |
| CHANNELS                  |                                                                                     |                                                                                                                                                                       |             |
| Emitter & Parameters      |  | Each channel has an emitter. It displays the channel number, emitter temperature, power, and cure time. If no emitter is plugged in, the channel displays NA,0°C,0,0. |             |

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 6/12/26.

## Spare Parts & Accessories

### Accessories

| Item                                                                                                   | Part Number   |
|--------------------------------------------------------------------------------------------------------|---------------|
| <b>Personal Protection Equipment</b>                                                                   |               |
| Protective Goggles — Green                                                                             | 35286         |
| Protective Goggles — Gray (standard model included with unit)                                          | 84126         |
| Face Shield                                                                                            | 35186         |
| <b>Accessories</b>                                                                                     |               |
| Interconnect Cable, Type L & L — 2 m , 5 m                                                             | 84025 , 84027 |
| Interconnect Cable, Type I & L — 2 m , 5 m                                                             | 84026 , 84028 |
| Extension Cable, Type I & I — 5 m                                                                      | 84306         |
| Extension Cable, Type I & L — 5 m                                                                      | 84307         |
| Footswitch                                                                                             | 84124         |
| <b>Radiometer</b>                                                                                      |               |
| ACCU-CAL™ 50-LED Radiometer                                                                            | 40505         |
| <b>Stands &amp; Shields</b>                                                                            |               |
| Mounting Stand                                                                                         | 88844         |
| Three-Sided Acrylic Shield                                                                             | 81016         |
| Light Shield<br>360° shielding. Swing-up door and slide-out shelf. Not compatible with Dymax shutters. | 88845         |

### Components & Spare Parts

| Item                                                | Part Number |
|-----------------------------------------------------|-------------|
| BlueWave FX 1250 Emitter RediCure (365 nm)          | 88801       |
| BlueWave FX1250 Emitter PrimeCure (385 nm)          | 88802       |
| BlueWave FX1250 Emitter VisiCure (405 nm)           | 88803       |
| BlueWave FX1250 Controller 1CH (China Cord)         | 88805       |
| BlueWave FX1250 Controller 2CH (China Cord)         | 88804       |
| BlueWave FX1250 Controller 1CH (North America Cord) | 88846       |
| BlueWave FX1250 Controller 2CH (North America Cord) | 88847       |
| BlueWave FX1250 Controller 1CH (No Cord)            | 88850       |
| BlueWave FX1250 Controller 2CH (No Cord)            | 88851       |
| Power Cord, BlueWave FX-1250, 2M, China             | 84020       |
| Power Cord, BlueWave FX-1250, 2M, North America     | 84061       |
| Power Cord, BlueWave FX-1250, 2M, EU                | 84023       |
| Power Cord, BlueWave FX-1250, 2M, UK                | 84024       |
| Glass Replacement Kit                               | 83015       |
| PLC I/O Terminal Block (22 pin)                     | 84062       |

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 6/12/26.


## Specifications



| Property                                     | Specification                                                                                                                                                                            |                       |                       |
|----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|-----------------------|
| Emitter                                      | RediCure                                                                                                                                                                                 | PrimeCure             | VisiCure              |
| Output Wavelength                            | 365 nm                                                                                                                                                                                   | 385 nm                | 405 nm                |
| Irradiance Output at 25-mm Working Distance* | 1.7 W/cm <sup>2</sup>                                                                                                                                                                    | 2.1 W/cm <sup>2</sup> | 2.0 W/cm <sup>2</sup> |
| Curing Area                                  | 5" x 5" [127 mm x 127 mm]                                                                                                                                                                |                       |                       |
| Power Requirements                           | 100-240 V~, 50/60 Hz   1CH Controller: 850 W   2CH Controller: 1700 W                                                                                                                    |                       |                       |
| Cooling                                      | Air cooled                                                                                                                                                                               |                       |                       |
| Dimensions (W x D x H)                       | 1CH Controller: 15" x 12.6" x 6.5" [380 mm x 320 mm x 166 mm]<br>2CH Controller: 16.5" x 13.8" x 6.5" [420 mm x 350 mm x 166 mm]<br>Emitter: 6.7" x 5.3" x 6" [170 mm x 134 mm x 152 mm] |                       |                       |
| Weight                                       | 1CH Controller: 28.2 lb. [12.8 kg]<br>2CH Controller: 43.7 lb. [19.8 kg]<br>Emitter: 8.8 lb. [4 kg]                                                                                      |                       |                       |
| Unit Warranty                                | 1 year from purchase date                                                                                                                                                                |                       |                       |
| Operating Environment                        | 10°C to 40°C (50°F to 104°F)<br>0 - 80% relative humidity, non-condensing (recommended: 30% RH)<br>2,000-meter max. altitude                                                             |                       |                       |
| Shipping and Storage Conditions              | Temperature: -20°C to +50°C<br>Humidity: 10 - 80% RH, non-condensing<br>Ship via standard ground, ocean, or air freight                                                                  |                       |                       |
| Certifications                               | RoHS, CE Marked, UKCA, EMC and Low Voltage                                                                                                                                               |                       |                       |

\* Measured using a Dymax ACCU-CAL™ 50-LED radiometer in flood mode at 25-mm working distance.

**Figure 40.**  
Dimensions

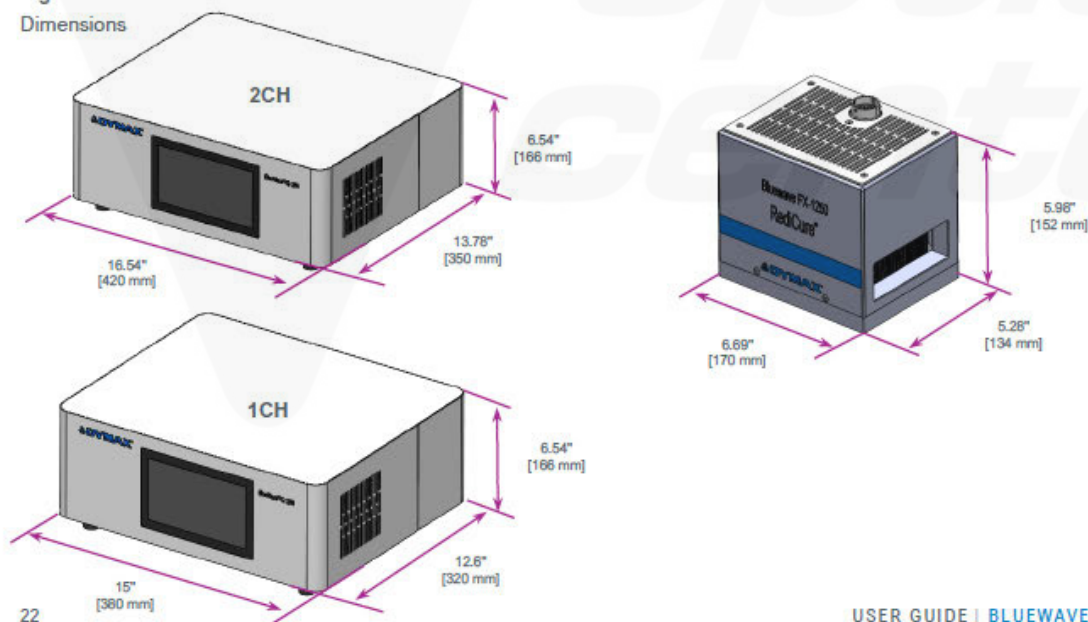

USER GUIDE | BLUEWAVE FX-1250

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**


[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA


Product data subject to change without notice. FOC last update 6/12/26.



**Figure 41.**  
Mounting Hole Locations and Size

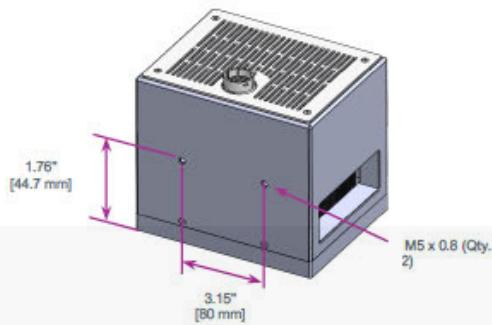

**Figure 42.**  
Mounting Stand (PN 88844)

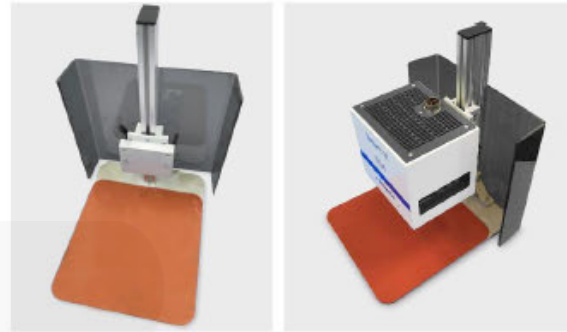

Mounting stands are sold separately. Emitters can be mounted on mounting stand with two M5 screws included with the mounting stand.

**Table 6.**  
Operation Timing

| Input Event                                         | Out Event                       | Test Condition                       | Maximum Time Delay |
|-----------------------------------------------------|---------------------------------|--------------------------------------|--------------------|
| LED ON/OFF Change to Low                            | UV LED ON                       | PLC Mode                             | 20 ms              |
|                                                     | LED STATE Output Change to LOW  |                                      | 25 ms              |
| LED ON/OFF Change to High                           | UV LED OFF                      |                                      | 30 ms              |
|                                                     | LED STATE Output Change to High |                                      | 40 ms              |
| LED ON/OFF (Closed)                                 | UV LED ON                       | Manual Mode                          | 150 ms             |
|                                                     | LED STATE Output Change to LOW  |                                      | 180 ms             |
| LED ON/OFF (Open)                                   | UV LED OFF                      |                                      | 25 ms              |
|                                                     | LED STATE Output Change to High |                                      | 50 ms              |
| LED ON/OFF Asserted<br>(Change form Open to Closed) | UV LED ON                       | Timer Mode<br>UV LED is OFF          | 140 ms             |
|                                                     | LED STATE Output Change to Low  | Before Timer Expired<br>UV LED is ON | 150 ms             |
|                                                     | UV LED OFF                      |                                      | 140 ms             |
|                                                     | LED STATE Output Change to High |                                      | 160 ms             |

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

## Validation

Tests should be conducted prior to production to determine the time and light intensity required to fully cure your resin. The following approaches may be used to validate the curing process.

### Set Exposure Time, Determine Intensity

Users can specify a cure time and, through empirical testing, determine the intensity required to achieve a full cure. As with any manufacturing process, it is advisable to incorporate a safety factor.

### Set Intensity, Determine Exposure Time

Users can specify light intensity and, through empirical testing, determine the exposure time required to achieve a full cure. As with any manufacturing process, it is advisable to incorporate a safety factor.

**NOTE:** Dymax recommends intensities low at first to preserve LED life.

## Control

Process validation confirms a minimum acceptable intensity. Users can then choose to operate at full intensity (using the excess intensity as an additional safety factor) or adjust the output to a specific intensity level. To ensure consistent and repeatable process results, intensity levels should be monitored with a radiometer. This enables users to identify light intensity changes and take corrective action (either adjusting the light intensity or performing maintenance).

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 6/12/26.

## Declaration of Conformity

Figure 43.

Declaration of Conformity - CE



**DYMAX®**

EU Declaration of Conformity

Manufacture:  
Hanarey Chemicals (Shanghai) Co., Ltd.  
No.111 Muhua Road, Fengdan District,  
Shanghai, China 201507

Product description:  
Model name(s):

UV Flood Curing Device  
BlueWave FX-1250 Controller 1CH/2CH  
BlueWave FX-1250 Emitters RediCure/ PrimeCure/ VisiCure  
BlueWave FX-1250 Interconnect cable I&L/ L&L

 
*This product complies with the following relevant Union Harmonization Legislation:*

Electromagnetic Compatibility Directive (2014/30/EU):  
EN 55011:2016+A1:2017+A11:2020  
EN 61000-3-2:2014 Class A  
EN 61000-3-3:2013  
EN 61326-1:2013

Low Voltage Directive (2014/35/EU):  
EN 61010-1:2010+A1:2019  
EN 62471:2008

RoHS Directive 2011/65 EU (Incl. (EU) 2015/863)  
EN IEC 63000:2018

**Declaration:**  
This declaration of conformity is issued under the sole responsibility of the manufacturer.  
Signed for and on behalf of Hanarey Chemicals (Shanghai) Co., Ltd

 2021.11.3 Shanghai  
Name Date Location

**CE**

Authorized Signatory:  
Kyle Zhu  
Senior Manager, Equipment Development  
Hanarey Chemicals (Shanghai) Co., Ltd.

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](https://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 6/12/26.



**Figure 44.**  
Declaration of Conformity – UK CA

**DYMAX®**

UK Declaration of Conformity

Manufacture:  
Hanarey Chemicals (Shanghai) Co., Ltd.  
No.111 Muhua Road, Fengxian District,  
Shanghai, China 201507

Product description:  
Model name(s):  
UV Flood Curing Device  
BlueWave FX-1250 Controller 1CH/2CH  
BlueWave FX-1250 Emitter RediCure/ PrimeCure/ VisiCure  
BlueWave FX-1250 Interconnect cable I&L/ L&L

*This product complies with the following relevant UK Legislation:*

Electromagnetic Compatibility Regulation 2016:  
EN 55011:2016+A1:2017+A11:2020  
EN 61000-3-2:2014 Class A  
EN 61000-3-3:2013  
EN 61326-1:2013

Electrical Equipment (Safety) Regulations 2016:  
EN 61010-1:2010+A1:2019  
EN 62471 :2008

The Restriction of the Use of Certain Hazardous Substances  
in Electrical and Electronic Equipment Regulation 2012  
EN IEC 63000:2018

**Declaration:**  
This declaration of conformity is issued under the sole responsibility of the manufacturer.  
Signed for and on behalf of Hanarey Chemicals (Shanghai) Co., Ltd.

*[Signature]* *2021.11.3* *[Signature]*  
Name Date Location

Authorized Signatory:  
Kyle Zhu  
Senior Manager, Equipment Development  
Hanarey Chemicals (Shanghai) Co., Ltd.

**UK  
CA**

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without  
notice. FOC last update 6/12/26.

© 2022-2025 Dymax Corporation. All rights reserved. All trademarks in this guide, except where noted, are the property of, or used under license by Dymax Corporation, U.S.A.

Please note that most curing system applications are unique. Dymax does not warrant the fitness of the product for the intended application. Any warranty applicable to the product, its application and use is strictly limited to that contained in Dymax standard Conditions of Sale published on our website. Dymax recommends that any intended application be evaluated and tested by the user to ensure that desired performance criteria are satisfied.



**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](https://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 6/12/26.