

# **Manufacturer:**

Dymax


# **Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

**Manufacturer Part Number:** 

88848

Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

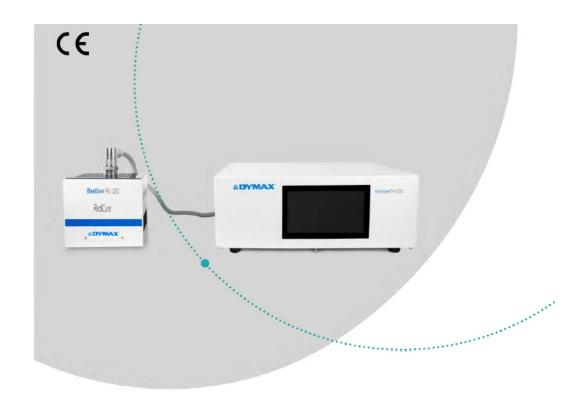



Large-Area LED Flood System
User Guide
Rev: C



# **Manufacturer:**

Dymax

# **Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# **Manufacturer Part Number:**

88848

Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# Introduction

This guide describes how to set up, use, and maintain the BlueWave® FX-1250 LED flood-curing system safely and efficiently.

# Intended Audience

This user guide is meant for experienced process engineers, technicians, and manufacturing personnel. If you are new to high-intensity LED light sources and do not understand the instructions, contact Dymax Application Engineering for answers to your questions before using the equipment.

# Where to Get Help

Dymax Customer Support and Application Engineering teams are available by phone and email in the United States, Monday through Friday, from 8:00 a.m. to 5:30 p.m. Eastern Standard Time, and in Germany, Monday through Friday, from 8:00 a.m. to 5:00 p.m. Central European Time. You can also email Dymax at info@dymax.com or Dymax Europe GmBH at info\_de@dymax.com. Contact information for additional Dymax locations can be found on the back cover of this user quide

Additional resources are available to ensure a trouble-free experience with our products:

- Detailed product information on our website www.dvmax.com & www.dvmax.de
- Dymax adhesive Product Data Sheets on our website
- Safety Data Sheets (SDS) provided with shipments of Dymax adhesives

WARNING! Under NO circumstances should the interconnect cable from the controller to the LED emitter be connected or disconnected while power to the unit is on. This procedure is usually called "hot swapping" and should not be performed as it could cause damage to the controller or the emitter. Always power down the equipment before disconnecting or connecting any of these devices

# Safety



WARNING! If you use this UV light source without first reading and understanding the information in the UV Light Safety Guide, SAF001, injury can result from exposure to high-intensity light. To reduce the risk of injury, please read and ensure you understand the information in that guide before assembling and operating the Dymax UV LED light source.

To use the BlueWave FX-1250 system safely, it must be set up and operated in accordance with the instructions given by Dymax. Using the system in any other manner will impair the protection of the system. Dymax assumes no liability for any changes that may impair the protection of the BlueWave FX-1250 system.

This device falls under IEC 62471 Risk Group 3 for UVA and Blue Light emissions:



WARNING! UV emitted from this product. Avoid eye and skin exposure to unshielded products.



WARNING! Possibly hazardous optical radiation emitted from this product. Do not look at operating lamp. Eye injury may result.



WARNING! Possibly the thermal exhaust hole temperature from emitter will be high, please don't touch the heatsink by hand



WARNING! The BlueWave FX-1250 is designed and certified to operate with the Dymax supplied 16 Amp, 1.5 mm<sup>2</sup>, 3 conductor power cord. Do not use any other non-standard power cord.



WARNING! The BlueWave FX-1250 is designed and certified to operate as instructed within this document. Alteration of the system or its component installation may pose a shock hazard.



# **Manufacturer:**

Dymax

# **Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# **Manufacturer Part Number:**

88848

Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# Product Overview

The BlueWave FX-1250 is a high-intensity LED flood system used for curing light-curable materials. The unit is designed to be integrated into a larger system, such as an automated manufacturing system, or used with a light shielding enclosure to create a bench-top curing station

The BlueWave FX-1250 can be used for manual and automated process applications and is composed of a controller and LED flood emitter, which is available in three different wavelengths: VisiCure (405 nm), PrimeCure (385 nm), and RediCure (365 nm).

The controller portion consists of an integrated control module and power supply. It allows complete control of an LED emitter, including setting intensity, timing, operation, and programming, while reporting the identity, operating parameters, and status of the emitter. It is designed to be used with any of the three LED emitter wavelengths. It is available in one channel (1CH) and two channel (2CH) configurations. The 2CH supports any two emitters, regardless of wavelength, working at the same time.

System Name BlueWave FX-1250	
Controller Model	BlueWave FX-1250 1CH BlueWave FX-1250 2CH
Emitter Model	BlueWave FX-1250 RediCure BlueWave FX-1250 PrimeCure BlueWave FX-1250 VisiCure

The BlueWave FX-1250 functions as a flood-curing system with a 127 mm x 127 mm (5 in x 5 in) irradiated curing area.

The unit can be operated in admin mode (unrestricted control) or production mode (restricted control) which allows for process management via access

The unit can be controlled as well by Programmable Logic Controller (PLC) for automation applications.

LED technology within the BlueWave FX-1250 LED Flood System allows for instant on/off activation without the need for a warm-up period and is also rated for continuous operation.




# Controller Main Components

The interactive parts of the controller include the Display Screen, Power Switch, Power Input Receptacle, Output CH1 ,Output CH2 , RS232 Receptacle, RS485 Receptacle and PLC Interface

Figure 2 Controller Front Panel



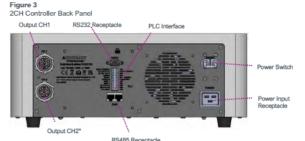

\*Note: Figure 3 is of a 2CH controller. 1CH controllers do not have Output CH2

Display Screen: Controls the operation of the controller and displays the operation parameters.

Power Switch: Controls the controller's power.

Power Input Receptacle: Used to connect the power cord.

Output CH 1, CH2: Used to connect the interconnect cable. There is no difference between the two receptacles, and they can be connected interchangeably.

RS485 & RS232 Receptacle: Used to communicate with a UVCS V3.0 conveyor. No connection is required when the controller is used alone

PLC Interface: Used to connect to a PLC.



# **Manufacturer:**

Dymax


# **Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# **Manufacturer Part Number:**

88848

Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

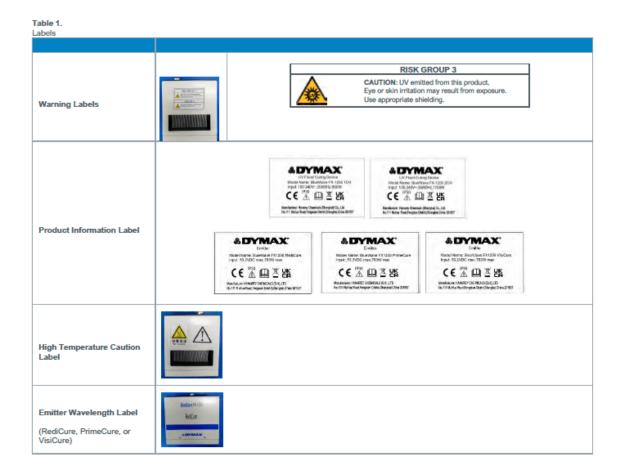



# **Manufacturer:**

Dymax

# **Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# **Manufacturer Part Number:**

88848

Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# Unpacking

# Unpacking and Inspecting Your Shipment

Upon arrival, inspect all boxes for damage and notify the shipper of box damage immediately. Open each box and check for equipment damage. If parts are damaged, notify the shipper and submit a claim for the damaged parts. Contact Dymax so that new parts can be shipped to you immediately. The parts below are included with your purchase configuration. If parts are missing from your order, contact your local Dymax representative or Dymax Customer Support to resolve the problem.

inspect the glass for any damage or residue on the surface. Carefully clean the glass with the alcohol swab. Take care not to touch the glass with bare hands, as any residue left on the window can adversely affect performance on the unit.

The parts below are included with your purchase configuration

# Controller Only\*

- BlueWave FX-1250 1CH or 2CH Controller (model as selected at time of purchase)
- Power Cord
- BlueWave FX-1250 LED Flood System User Guide
- UV-Light Safety Guide (SAF001)
- Terminal Block (attached to the controller, but not plugged in, with jumper wires
- Footswitch
- Safety Eyewear

# Emitter Only\*

- BlueWave FX-1250 Emitter (RediCure, PrimeCure, or VisiCure, model as selected at time of purchase)
- UV-Light Safety Guide (SAF001)
- \* Orders of individual controllers and emitters must purchase interconnect cables separately.

# Figure 4. Components of a BlueWave FX-1250 -Controller

mponents of a BlueWave FX-1250 -Emitter Only



# Components of a BlueWave FX-1250 - Complete Kit



- All parts listed above included (Note: only the 1CH Controller is available in a Complete Kit)
- Interconnect Cable (Type I&L)

# System Installation

# System Assembly

The system includes two major parts, the controller and emitter. The two parts are shipped separalely.

To assemble the two parts together, plug one side of the interconnect

cable into the controller and the other side into the emitter (Figure 7).

NOTE: Be careful to keep the glass at the bottom of the emitter clean. To avoid leaving fingerprints on the glass, do not touch the glass with



WARNING! The BlueWave FX-1250 is designed and certified to operate as instructed within this document. Alteration of the system or its component installation may nose a shock hazard

The system can be used in various scenarios with additional mounting fixtures or Dymax accessories, i.e., as a bench-top unit with a stand on a chamber, as part of a conveyor, etc. This system should only be operated in a location that provides proper cooling. Location requirements are as follows:

- For proper cooling of the unit, upper intake and lower exhaust must not be blocked.
- Minimum recommended clearance is 8 inches [200 mm].
- Note that the lower exhaust may have one side blocked for installations where two units are side by side. The system will operate safety but run notter.



# **Manufacturer:**

Dymax


# **Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# **Manufacturer Part Number:**

88848


Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

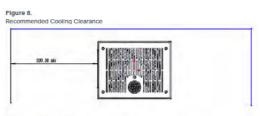

# Wiring and Connections

All the wire and cable connections are located on the rear of the controller or the top of emitter. Figure 9.

Controller Connections

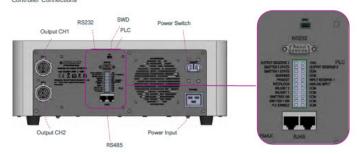

Power Switch: Tums the unit on and off.

Power Input: The power cord plugs in here. Only use the power cord supplied by Dymax (Figure 10) as the power cord supplied with the controller is specifically designed and certified to work with the controller.



WARNING! The BlueWave FX-1250 is designed and certified to operate with the Dymax supplied 16 Amp, 1.5 mm², 3 conductor power cord. Do not use any other non-standard power cord.



Output CH1/CH2: Output power and control signal to emitter. Only use the interconnect cable made by Dymax (Figure 11) as this interconnect cable is specifically designed for this system. One controller in 2CH configuration can support up to two emitters at the SWD: Burn in or update the software into controller.

R\$232: Conduct communication to computer. PLC: Controlled by PLC program. R\$485: Controlled by Internet.


# Connections

The interconnect cable has two 15P plugs that connect the controller to the emitter

<u>Plugating the Interconnect cable into the controller</u>. Roll the plug clockwise while inserting to plug the cable in. Roll the plug counterclockwise while removing to unplug the cable (Figure 12).

Plugging the interconnect cable into the emitter: Roll the plug clockwise while inserting to plug the cable in. Roll the plug counterclockwise while removing to unplug the cable (Figure 13).



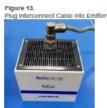

Attention: When plugging in the lemale and male connectors, observe the key and keyway of each connector. The key should align with the keyway (Figure



# **Manufacturer:**

Dymax

# **Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# **Manufacturer Part Number:**

88848

Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm





# Plugging the footswitch or light shield into the controller:

- 1. Using a jumper wire, connect PLC ENABLE (Input Pin 1) to the opposite COM port (2)
- Using a jumper wire, connect the INHIBIT (input Pins 7, 9) for each emitter being used to its opposite COM port
   Connect the rootswitch or light shield into the EMITTER ON (input Pins 3, 5) for each channel into its opposite COM port.

To control two emitters with a single footswitch, jumper both INHIBITS, and the EMITTER 2 ON, then plug the footswitch into EMITTER 1 ON and the opposite COM port.

# Figure 15. Plug Foolswitch Inito Controller RS232 RS2322 RS2322 RS2322 RS2322 RS2322 RS2322 RS2322

Note: The Input/Output terminal block is included in the packaging, with the jumper wires inserted. When the terminal block is installed, the controller will enter PLC mode. PLC mode disables commands and parameter setting from the HMI. To set parameters from the HMI, the terminal block must be removed, or the connection between the PLC Enable and COM pins (1 and 2) must be disconnected.

To allow setting of parameters by analog input: start with the standard installation described for the footswitch and light shield. Add an additional jumper between PRG/EXT (13) and COM (18). Connect to Analog input (12) and COM (16) for input and +24V (22) and COM (18) to add 24V power.

Figure 16.





# I/O Interface Summary

Table 2 below shows the summary of all signals on the PLC Connector.

# Table 2.

		Signal Level	
Signal Name / Description	PIN#	Asserted	De-Asserted
INPUTS			
Input Reserve 1	14	Do Not Use	
ANALOG INPUT Only used in PLC EXT mode	12	0 - 10 VDC	N/A
Sets Emitter intensity level (0~1V=0% output,1V=10% output, 10V=100% output)			
INTERLOCK	- 11	0 VDC, GND	(Open)
PLC ENABLE	1	0 VDC, GND	(Open)
Emitter 1 ON	3	0 VDC, GND	(Open)
Emitter 2 ON	5	0 VDC, GND	(Open)
PRG/EXT	13	0 VDC, GND(EXT)	(Open)(PRG)
INHIBIT 1	7	0 VDC, GND	(Open)
INHIBIT 2	9	0 VDC, GND	(Open)
OUTPUTS	20,000		7770,000,000,000
PLC POWER <sup>(1)</sup> (24V, 50mA maximum)	22	Always On	
WARNING	15	0 VDC, GND	Open
EMITTER 1 STATE	17	0 VDC, GND	Open
EMITTER 2 STATE	19	0 VDC, GND	Open
Output Reserve 1, Output Reserve 2	21,20	Do Not Use	
RETURNS (These pins are common and may be used interchangeably)	Post disc.	ASSTRUCTURE TO CO.	
СОМ	2,4,6,8,10,16	Common Grounds	

<sup>(1)</sup> PLC power channel is a 24V source available for use to drive PLC logic but must be current limited using pull-down resistors to protect the BlueWave FX-1250 when directly attached to the I/O channels through the PLC connector.

<sup>(2)</sup> CHASSIS Ground connections do not share a common connection with signal returns and cannot be interchanged with signal returns.



# **Manufacturer:**

Dymax

# **Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# **Manufacturer Part Number:**

88848

Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# PLC UV Control

PLC switching may be driven by manual switch, relay, or optical coupler. Only analog intensity uses a voltage input to the PLC.

To use the PLC mode, the PLC ENABLE (input pin 1) must be pulled down to low by grounding to the COM ground point. The PLC INTERLOCK (input Pin 11) disables all the UV output when it is de-asserted. It is pulled down before other control signal in PLC mode.

The PLC INHIBIT 1 (Input Pin 7) and INHIBIT 2 (Input Pin 9) disables each channel's UV output when it is de-asserted. After the INTERLOCK is pulled down, the INHIBIT 1 or INHIBIT 2 is also pulled down.


After above signals are pulled down, the PLC can control the UV on/off using the Emitter 1 ON (Input Pin 3) or Emitter 2 ON (Input Pin 5). When this input is pulled


down by grounding to COM ground, the UV LED will turn on. The PLC can also control the intensity of the UV output.


- When the PRG/EXT (Input Pin 13) is pulled down low by grounding to COM ground, the Intensity will be controlled by the EXTERNAL ANALOG INTENSITY input voitage.
- The ANALOG INPUT (Input Pin 12) is an analog voltage input. The voltage range is 0 to 10VDC.

Any setting below 1 VDC will set the intensity to 0% and each 1V additional voit increases intensity by 10%. (Example: 1V = 10%, 5V = 50%, 10V = 100%). The example connection for the PLC control signal is shown in Figure 17.

Figure 17.

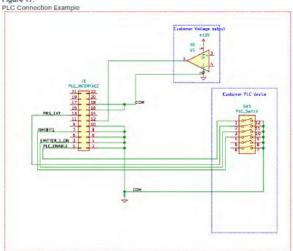

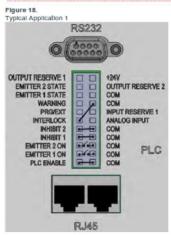

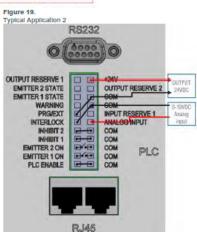

Note: The Input/Output terminal block is included in the packaging, with the jumper wires inserted. When the terminal block is installed, the controller will enter PLC mode. PLC mode disables commands and parameter settings from the HMI. To set parameters from the HMI, the terminal block must be re or the connection between the PLC Enable and COM pins (1 and 2) must be disconnected.



# **Manufacturer:**

Dymax

# **Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# **Manufacturer Part Number:**

88848

Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# Status Output

There are three status outputs. They are driven by an optical coupler. These outputs work in any mode and can be used as status inputs for PLC or any status display/monitor purpose.

- WARNING Output low indicates the unit is working normally.
- Emitter 1 & 2 State Output low indicates the UV LEDs are ON.

An example application of these signals is shown in Figure 20. PLC Power channel is a 24V source available for use to drive PLC logic but must be current limited using pull-down resistors to protect the FX-1250 when directly attached to the I/O channels through the PLC connector. The support current is 50 mA max

Figure 20. Status Outputs Connection Using On-Board 24V Source



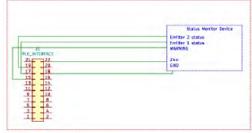



Figure 21.
PLC Status Outputs Using Customer-Supplied 24V Source



Figure 22. Examples of Customer Configurations for Monitoring Outputs

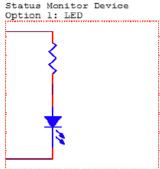

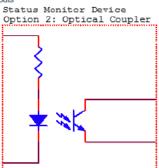

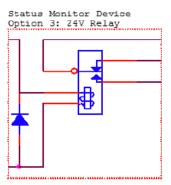



# **Manufacturer:**

Dymax

# **Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# **Manufacturer Part Number:**

88848

Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# Operation Start Up Figure 23. Start-Up Window Verify all connectors are firmly plugged into the rear panel of the BlueWave FX-1250 controller and emitte 2. On the rear panel of the controller, move the power switch to the ON position (up direction). &DYMAX The start-up window (Figure 23) will appear for several seconds as the system initializes. 4. After starting up, the main window (Figure 24) appears. WARNING! Emitters must be installed correctly before power up. If no emitter is installed, the controller is not operable. Power off the controller and install at least one emitter.

5. The system is now ready to have emitter parameters set.

# Main Window Settings

- In the main window, the operator can:

  1. Set each channel's power and cure time.

  2. Start or stop each channel or all channels.



Number	Name	ICON	Description
1	System setting	O	Press to enter the system setting window to set the system parameters (clock, calendar, password, LED on time, brightness).
2	Calendar and clock	2027/2/13	Display clock and calendar.
3	Progress bar	Usurine SXI	If the cure time is not zero, the green bar increases to indicate the progress of a cure time count.  If the cure time is zero, the green bar does not increase.  LED on time displays the total time the LED has been on.
4	Play/Stop button	) 	Each channel controls one emitter.  The green color indicates the emitter is on.  is pressed to start the emitter.  It is pressed to start the emitter.  The red indicates the emitter is off when you just plug one emitter.  The dark grey indicates no emitter is plugged in. Power off the controller to install an emitter.  The red and dark grey play button have no function when pressed.
5	Emitter & parameters		Each channel can be connected to an emitter. It displays the channel number on top.
6	Power and type button	CHT RedCare : 995.	Displays the channel number, emilter type, power set. The display will be one of four colors: Blue - RediCure, Bluck - VisiCure Grey - PrimcCure Red - NA. Press to set the power of this channel. If no emilter is plugged in, the channel displays NA.
7	Timer	10-2n; 20e	Counts down to zero if the cure time is not zero. Counts up if the cure time is zero. Press to set the cure time.
8	Program	MODRA	Press to save and load stored setting parameters.
9	Stop button	ETOP	Press to stop all emitters.
10	Run button	1.00	Press to start all emitters. When at least one of the emitters is on, the 'RUN' turns to 'RUNNING'.



# **Manufacturer:**

Dymax

# **Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# **Manufacturer Part Number:**

88848

Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# Setting the Power The operation steps are: 1. On the main window, press the power button (Table 3, #6) to enter the power window (Figure 25). Enter the desired value using the pad and press enter. (10%-100%). The new value will display in the bar. If no change is needed, press the back arrow in the top left corner to exit the power window. 8 9 C 🖦 5 6 On the main window, press the timer (Table 3, #7) to enter the cure time window (Figure 26). 2. Enter the desired value using the pad and press enter. (0-9999 seconds). The new value will display in the bar. Figure 26. Cure Time Window Set the cure time to 0 sec. to run the emitter until it is manually Set a value greater than 0 sec, to run the emitter automatically for that duration.

After power and cure time have been set, the emitters can be run. Each emitter channel can be operated separately using the

Cure times can be set in intervals of 0.1 sec. If no changes are needed, press the back arrow in the left top

play/stop button (Table 3, #4) on the main window.

corner to exit the cure time window.

To operate all emitter channels together, the run (Table 3, #10) and stop (Table 3, #9) buttons on the main window can be used to start and stop the emitters.



# Program Setting

To save your set values in the main window, press program (Table 3, #8) on the main window to enter the program setting window. You are required to enter the user's password correctly before the program window (Figure 27) loads.



DELETE

RENAME

There are 16 slots for selection. Their default names Program # (1-16). Only one slot can be selected at a time

# The operation steps are:

- Press on a program slot. The program slot will change to blue when selected. The parameters stored in that program slot will display in the white bar.
- Press the Rename button to rename the slot.
- Press the Save button to save the current set values (channel number, power, and cure time) to that program slot.
- Press the Load button to load the slot's value and exit to the main window.
- Press the Delete button to erase a slot's name and set the stored values of the slot to 0.
- Press the back arrow in the top left corner to exit the

# Settings

Press the system setting button 🤦 on the main window. A password input window (Figure 28) will appear. The password must be entered to enter the System Settings window. Press the input bar on the password input window to activate the keyboard (Figure 29).

The default password is set to "1234".







# **Manufacturer:**

Dymax

# **Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# **Manufacturer Part Number:**

88848

Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

Once the password is entered, the System Settings window (Figure 30) will appear.

Figure 30.



# Figure 31. Brightness Adjustment Bar

# Brightness

- 1. On the system settings window, press on the brightness dropdown button (Figure 31).
- 2. Move the bar up and down to adjust the brightness of the screen.
- 3. Press the back arrow in the left top corner to exit.

# Clock and Calendar Settings

- 1. On the system settings window, press the time dropdown arrow.
- Press the clock in the window to input the date and time by using the pad.
- 3. Press the back arrow on the top left to exit.

# Resetting the Emitters' LED ON Time

The emitter on time appears in the gray bar (Figure 33) on the System Settings window.

Once the emitter is on, the LED on time will begin counting. If an emitter is changed for a channel, the LED on time must be cleared for it to recount in that channel.

Press the Reset button located to the right of the emitter LED on time to clear it.

# Changing the Password

- Press the change Password button on the system settings window to enter the Change Password window.
- Press New Password to input the new password.
- Press "Confirm New Password" and input the new password again.
   The two input passwords must be the same.
- 4. Press the back arrow in the left top corner to exit.

# System Reset

Press the System Reset button on the System Settings window to:

- Reset the password to the default:1234
- Reset the program names and values to the default

Figure 32.

Clock and Time Input Pad



Figure 33.



Figure 34.





# **Manufacturer:**

Dymax

# **Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# **Manufacturer Part Number:**

88848

Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# System Log

# Checking the Alarm History Log

To check the alarm history log, press the Alarm Log window. The error window will appear (Figure 35).

Note: The alarm records are only updated. They can't be deteted. The lines show the date and time of the alarm, and the code to describe the reason for the alarm.

The controller can save a maximum of 100 records. When over 100 alarms have been recorded, the next number is overlaid by the new alarm.

Press the Back arrow to return to the main window.

# When the Controller Alarms

When the controller alarms, the controller is forced to enter the Alarm window. The Alarm button appears in the bottom. Press the Turn Off Button (Figure 36) to enter the Alarm Log window.

After the alarm code is checked, press the Back arrow to return to the main window.

An alarm icon will appear on the left of the stop button. Navigate to the log window directly by pressing the button. (Figure 37)

When an alarm occurs, the emitters are stopped, and the controller emits a

Press the Reset button to turn off the beep and disable the alarm.

# WARNING! Power off before checking the controller and emitters.

When any emitter's temperature is over 60°C, a warning screen pops up (Figure 38). It is a warning message only.

Press the Turn Off Button to close the warning screen. The warning will also automatically close when the emitter temperature returns to  $60\,^{\circ}$ C.

The emitter will automatically shut down if the maximum allowable temperature is reached.









Table	4.			
Alarm	Codes	and	Description	

Nami Codes and Description			
Alarm Code	ALARM message	Cause	
0x1000	Ctrl Over Temperature (>50°C)	The controller temperature is too high.	
0x2000	EM x (1,2) not installed	Emitter connection has problems after power up.	
0x2001	EM x (1,2) fan error	Emitter fan has no speed.	
0x2002	EM x (1,2) over temperature (> 69°C)	Emitter temperature is too high.	
0x2003	EM x (1,2) over current	Emitter current is too high.	
0x2004	EM x (1,2) zero output	Emitter has no current output.	

# **PLC Mode**

There are 2 working modes

Program: This is the default mode and is operable by the touch screen. Parameters can be stored in the program slots and called for operation The parameters can be stored in the program slots and called for operation. This is the default mode for the touchscreen.

PLC: The system can be controlled by PLC. This mode is triggered by the PLC ENABLE input signal. Please follow the wiring guide in "PLC UV Control" on page 10.

Once the PLC mode is on, the PLC mode window (Figure 39) displays.





# **Manufacturer:**

Dymax

# **Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# **Manufacturer Part Number:**

88848

Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

Table 5. PLC Mode Signals

Classi Name / December of	Pin#	Signal Color				
Signal Name / Description	Pin F	Asserted	De-Asserted			
INPUTS	INPUTS					
INTERLOCK	11	GREEN	RED			
PLC ENABLE	1	GREEN	RED			
LED ON1	3, Emitter 1 ON	GREEN	BLACK			
LED ON2	5, Emitter 2 ON	GREEN	BLACK			
PRG/EXT	13	(EXT), GREEN	(PRG), RED			
INHIBIT 1	7	GREEN	RED			
INHIBIT 2	9	GREEN	RED			
OUTPUTS						
WARNING	15	GREEN	RED			
STATUS 1	17, EMITTER 1 STATE	GREEN	BLACK			
STATUS 2	19, EMITTER 2 STATE	GREEN	BLACK			
CHANNELS						
Emitter & Parameters	0HL 67% 1998 394	Each channel has an emitter.  It displays the channel number, emitter temperature, power, and cure time. If no emitter is plugged in, the channel displays NA,0*C,0,0.				

# Spare Parts & Accessories

# Accessories

ltem .	Part Number
Personal Protection Equipment	
Protective Goggles — Green	35286



# **Manufacturer:**

Dymax

# **Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# **Manufacturer Part Number:**

88848

Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm


# Specifications





Property	Specification			
Emitter	RediCure	PrimeCure	VisiCure	
Output Wavelength	365 nm	385 nm	405 nm	
Irradiance Output at 25-mm Working Distance*	1.7 W/cm²	2.1 W/cm²	2.0 W/cm <sup>2</sup>	
Curing Area	5" x 5" [127 mm x 127 mm]			
Power Requirements	100-240 V~, 50/60 Hz   1CH Controller: 8	50 W   2CH Controller: 1700 W		
Cooling	Air cooled			
Dimensions (W x D x H)	1CH Controller: 15" x 12.6" x 6.5" [380 mm x 320 mm x 166 mm]  2CH Controller: 16.5" x 13.8" x 6.5" [420 mm x 350 mm x 166 mm]  Emitter: 6.7" x 5.3" x 6" [170 mm x 134 mm x 152 mm]			
Weight	1CH Controller: 28.2 lb. [12.8 kg] 2CH Controller: 43.7 lb. [19.8 kg] Emitter: 8.8 lb. [4 kg]			
Unit Warranty	1 year from purchase date	1 year from purchase date		
Operating Environment	10°C to 40°C (50°F to 104°F) 0 - 80% relative humidity, non-condensing (recommended: 30% RH) 2,000-meter max. altitude			
Shipping and Storage Conditions	Temperature: -20°C to +50°C Humidity: 10 - 80% RH, non-condensing Ship via standard ground, ocean, or air freight			
Certifications	RoHS, CE Marked, UKCA, EMC and Low Voltage			

<sup>\*</sup> Measured using a Dymax ACCU-CAL™ 50-LED radiometer in flood mode at 25-mm working distance.

# Figure 40.

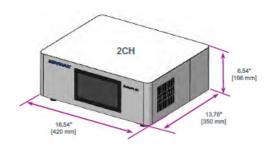

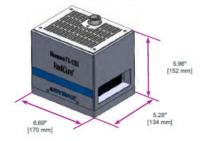

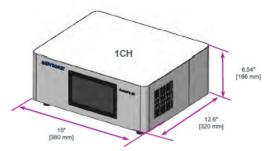



# **Manufacturer:**

Dymax


# **Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm


# **Manufacturer Part Number:**

88848

Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

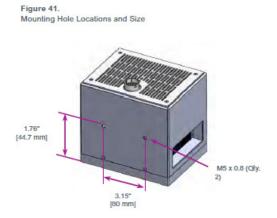



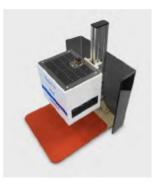

Mounting stands are sold separately. Emitters can be mounted on mounting stand with two M5 screws included with the mounting stand.

Table 6. Operation Timing

Input Event	Out Event	Test Condition	Maximum Time Delay
LED ONIOSE Observe to Law	UV LED ON		20 ms
LED ON/OFF Change to Low	LED STATE Output Change to LOW	2011	25 ms
LED ON/OFF Change to High	UV LED OFF	PLC Mode	30 ms
LED ON/OFF Change to High	LED STATE Output Change to High		40 ms
LED ON/OFF (Closed)	UV LED ON		150 ms
	LED STATE Output Change to LOW		180 ms
	UV LED OFF	Manual Mode	25 ms
	LED STATE Output Change to High		50 ms
LED ON/OFF Asserted (Change form Open to Closed)	UV LED ON	Timer Mode	140 ms
	LED STATE Output Change to Low	UV LED Is OFF	150 ms
	UV LED OFF	Timer Mode	140 ms
	LED STATE Output Change to High	Before Timer Expired UV LED is ON	160 ms



# **Manufacturer:**

Dymax

# **Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# **Manufacturer Part Number:**

88848

Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# Validation

Tests should be conducted prior to production to determine the time and light intensity required to fully cure your resin. The following approaches may be used to validate the curing process.

# Set Exposure Time, Determine Intensity

Users can specify a cure time and, through empirical testing, determine the intensity required to achieve a full cure. As with any manufacturing process, it is advisable to incorporate a safety factor.

# Set Intensity, Determine Exposure Time

Users can specify light intensity and, through empirical testing, determine the exposure time required to achieve a full cure. As with any manufacturing process, it is advisable to incorporate a safety factor.

NOTE: Dymax recommends intensities low at first to preserve LED life.

Contact the Dymax Application Engineering Team for additional process support.

# Control

Process validation confirms a minimum acceptable intensity. Users can then choose to operate at full intensity (using the excess intensity as an additional safety factor) or adjust the output to a specific intensity level. To ensure consistent and repeatable process results, intensity levels should be monitored with a radiometer. This enables users to identify light intensity changes and take corrective action (either adjusting the light intensity or performing maintenance).



# **Manufacturer:**

Dymax

# **Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# **Manufacturer Part Number:**

88848

Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm





# **Manufacturer:**

Dymax

# **Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# **Manufacturer Part Number:**

88848

Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm





# **Manufacturer:**

Dymax

# **Product Name:**

Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# **Manufacturer Part Number:**

88848

Click here for more details on the Dymax BlueWave® FX-1250 High Intensity LED Curing Flood System - 365nm

# Warranty

From date of purchase, Dymax Corporation offers a one-year warranty against defects in material and workmanship on all system components with proof of purchase and purchase date. Unauthorized repair, modification, or improper use of equipment may void your warranty benefits. The use of aftermarket replacement parts not supplied or approved by Dymax Corporation, will void any effective warranties and may result in damage to the equipment.

IMPORTANT NOTE: DYMAX CORPORATION RESERVES THE RIGHT TO INVALIDATE ANY WARRANTIES, EXPRESSED OR IMPLIED, DUE TO ANY REPAIRS PERFORMED OR ATTEMPTED ON DYMAX EQUIPMENT WITHOUT WRITTEN AUTHORIZATION FROM DYMAX. THOSE CORRECTIVE ACTIONS LISTED ABOVE ARE LIMITED TO THIS AUTHORIZATION

© 2022-2024 Dymax Corporation. All rights reserved. All trademarks in this guide, except where noted, are the property of, or used under license by Dymax Corporation, U.S.A.

Please note that most curing system applications are unique. Dymax does not warrant the fitness of the product for the intended application.

Dymax recommends that any

Intended application be evaluated and tested by the user to ensure that desired performance criteria are satisfied.

MAN120 3/13/2024