

## USER GUIDE



**Manufacturer:**

Domaille Engineering


**Product Name:**

Domaille OptiSaber® OS7500P Laser Fiber Cleaver for PRIZM® Light Turn & MXC® Connectors

**Manufacturer Part Number:**

OS7500P

▶ [Click here for more details on the Domaille OptiSaber® OS7500P Laser Fiber Cleaver for PRIZM® Light Turn & MXC® Connectors](#)

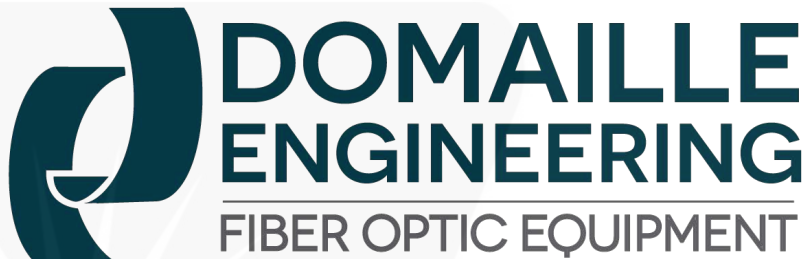

**OptiSaber®**

**Prizm®, MXC®**

**User & Maintenance Manual**

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 4/16/2026.

## Table of Contents

Welcome .....	4
Overview .....	4
Safety & Environmental Effects .....	4
Safety .....	4
Safety Warning and Identification Labels .....	4
Environmental Effects .....	6
Safety Systems & Radiation .....	6
Radiation Fields & Path .....	6
Levels of Radiation .....	6
Collateral Radiation .....	7
Protective Housing .....	7
Safety Interlocks .....	7
Getting Started .....	8
Unpacking & Setup .....	8
Parts & Functions .....	9
Laser Operation .....	13
Start-up Procedure .....	13
Operating the Laser .....	13
Cut Length Adjustments .....	13
Laser Shut Down .....	14
Laser Maintenance .....	15
Daily or More Often as Required .....	15
Monthly .....	16
Troubleshooting .....	17
Over Temperature .....	17
Service & Support .....	18
Technical Specifications .....	18
CE Notice (European Union) .....	18

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 4/16/2026.



## Printing History

June 2018

© Copyright 2018 by Domaille Engineering, LLC

© Copyright 2015 OpTek, Ltd 2015

*fiber  
optic  
center*

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

## Welcome

Congratulations on selecting the OptiSaber® OS7500P, designed for the laser cleaving of optical fibers being terminated in a PRIZM® LT or PRIZM® MT ferrule.

This User's Guide will assist you in the setup, operation and maintenance of the OS7500P laser cleaver to maximize the use and life of the equipment.

## Overview

The OptiSaber® Laser Cleaving System is designed to address the need to efficiently cleave optical fibers for the production of PRIZM® Light Turn & MXC® connectors.

The OptiSaber® OS7500P allows you to laser cleave up to four rows of 8, 12 or 16 fiber ribbons in one load without the need to remove for repositioning the different rows. The OS7500P was rigorously tested at US Conec and approved to meet their PRIZM® Laser Cleave Quality Guidelines, US Conec Doc# AEN-1919. The OS7500P is fast and accurate while saving critical floor space. Operators can initiate the cleave cycle by using a hand or foot switch for easy activation.

The patent pending PRIZM® adapter allows for accurate positioning of the optical fiber ribbon. The OptiSaber® includes a removable thumbwheel to set cleave length in increments of approximately 10 microns for accurate cleaving.

## Safety & Environmental Effects

### Safety

#### Laser Safety

The machine operates as a Class 1 (i.e. inherently safe) laser product system. Although, incorporating a Class 4 laser the machine is rendered inherently safe by the whole system design that is protected by access restrictions and mechanical interlocks. It is built to meet requirements of 21 CFR 1040. 10 and EN 60825-1 provided safety interlocks are not defeated.



***Under no circumstances should the machine be operated with safety interlocks over-ridden unless under the supervision of a responsible person suitably qualified in laser safety.***

***The warning signs that are used on the system are shown in the Safety Warning labels section of this User's Guide.***

#### Safety Warning and Identification Labels

The OptiSaber® is a Class 1 laser system but incorporates a Class 4 laser from which the user is protected by a light-tight protective housing.

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA



### Mechanical Safety

There are no user accessible moving parts.



***Under no circumstances should the machine be operated with safety interlocks over-ridden unless under the supervision of a responsible person suitably qualified in laser safety.***

The machine includes low power moving parts required for scanning the laser beam during processing. These parts are located within the protective housing and therefore not accessible during normal operations.

### Electrical Safety

The machine complies with all relevant USA, UK, and European electrical safety standards. All external panels require a tool for removal. Main voltage components are further shielded once external panels are removed. There are no High Voltage circuits accessible in the laser unit protective housing. The machine is fully EMC tested and certified. This includes testing at light industrial levels for emissions, and at industrial levels for susceptibility.

### Fume & Extract

Laser processing of materials generates fine dust and vapor particles. The nature, composition, and volume of these debris will be dependent on the material being processed and the laser parameters being used. The machine is intended for processing silica associated with fiber optical connectors, but Domaille does not have control over what materials are introduced into the laser unit. Consequently, Domaille cannot take responsibility for the fumes and particulates produced. It is the responsibility of the customer to ensure that adequate measures are taken to ensure the safe handling of fumes and particulates. To comply with safety regulations the extraction unit used with the machine must be operating correctly and connected with the supplied flexible hose to the extract hose connection.



***The machine should not be operated without a suitable and correctly functioning extract unit attached. It is the responsibility of the user to ensure that the extracted fumes and debris are handled safely and responsibly, and that the suitable safety documentation is prepared in accordance with local legislation and regulations.***

Domaille takes no responsibility for the collection or treatment of the processing fumes, or for the subsequent exhaust of the processed fumes. Domaille shall not be responsible for damage or failure due

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

to build-up of contamination caused by inadequate extraction or operation without a correctly operating extract unit.

### **Environmental Effects**

It is Domaille's policy to produce machines that have a positive overall environmental effect. In the case of the OptiSaber®, positive effects will result from subsequent improvements in performance and yield of the ultimate fiber optical product that this laser unit will allow. Negative environmental effects could result from machining of hazardous or toxic materials and it is strongly recommended that the user ensure that the handling of any process by-products be controlled to minimize any negative effect on the environment as a whole.

### **Connection to Utilities & Environment**

The laser unit is designed to operate in a clean environment, free from substantial sources of vibration and shock.

### **Safety Systems & Radiation**

This section covers the specific safety systems incorporated into this laser unit that are designed to protect the user from harmful radiation. This radiation, its paths and levels of intensity are described in detail along with all protective housings and interlock devices.



**There is no human access to laser radiation during normal operation or maintenance of the machine.**

### **Radiation Fields & Path**

Protective housings and interlocks completely cover and protect humans from the laser beam in normal operation and maintenance. The beams are only accessible with the covers removed and/or the interlocks defeated. No beam attenuators or scanners are present.

### **Levels of Radiation**

The laser sources are described in Table 1 below. The beam described is only accessible with the covers open while servicing the machine.

Parameter	CO <sub>2</sub> Laser (IR)
Wavelength	10.55-10.63um
Average Power	<50W
Output Power Stability	<5%
Operating Frequency & Duty Cycle	0-25kHz & 0-100%

Table 1

The parameters listed in Table 1 are the maximum values that are possible for the laser to produce, even under fault conditions.

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

### ***Collateral Radiation***

Collateral radiation generated by the process is minimized to very safe levels. Significant collateral radiation is not normally produced from this machine during operation or maintenance. Measurements of collateral radiation are described below. The interlocked protective housing meets Class 1 laser safety standards. It was constructed light-tight with material which is opaque to the laser radiation and capable of withstanding this radiation for an indefinite period.

- ***In operation:*** No collateral radiation is present in normal operation. If the laser is triggered when there is no connector in the tooling to be cleaved, the maximum collateral radiation measured at the loading port is six times below the MPE/AEL limit.
- ***In maintenance:*** No collateral radiation is present.

### ***Protective Housing***

The protective housing is an integral part of the laser unit and its operation, serving to prevent unnecessary human access to laser radiation.

The housing completely protects the user from laser beam access. There are no user serviceable parts in this machine.

### ***Safety Interlocks***

Mechanical safety interlocks are an integral part of the machine design. They have been installed in the appropriate places to ensure that no human access to the laser beam is possible during operation and maintenance.

*Fiber  
Optic  
Center*

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

## Getting Started

### Unpacking & Setup

NOTE: Your OptiSaber® Laser will arrive in a shipping case while the Extract Unit and accessories will ship in a separate box.

1. Remove all loose components from the shipping case.
2. Carefully lift OptiSaber® and Power Supply out of the shipping case on to a robust surface. Remove the plastic bag from around the laser unit.
3. Remove Extract Unit and accessories from the second shipping box.
4. Inspect the laser cleaver for any damage that may have occurred in shipping.
5. Start the setup by connecting Extraction Hose to top of Extract Unit by pushing firmly into fitting.
6. Assemble other end of the hose to the back of OptiSaber®. Position hose clamp no more than ½” from end of hose. Using a slotted screwdriver, tighten hose clamp screw.
7. Attach Activation Switch cable to the port labeled “Switch” located near the back of laser cleaver.
8. *Optional monitor may be connected to the port labeled “Monitor”. The monitor will be located in the bottom of the OptiSaber® shipping case.*
9. Connect each power cord into the Extract Unit and Power Supply.
10. Lastly, plug the other end of each power cord into the appropriate outlet (110/240 volt).

#### To use the Cyclone Separator, follow these steps.

1. Cut 2 feet (61cm) off of the extract hose.
2. Screw on hose cuffs to both cut ends of extract hose. (Hose Cuffs are located inside the Cyclone)
3. Connect the 2 foot hose to the Extract Unit and to the top of the Cyclone Separator.
4. Connect the other hose to the back of the Cyclone and the OptiSaber®.
5. You can place the handle of the Cyclone Separator underneath the latch of the Extract Unit lid to help stabilize the Cyclone.



**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA


## Parts & Functions



Contact the professionals at Fiber Optic Center for a quote or to get more details.

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

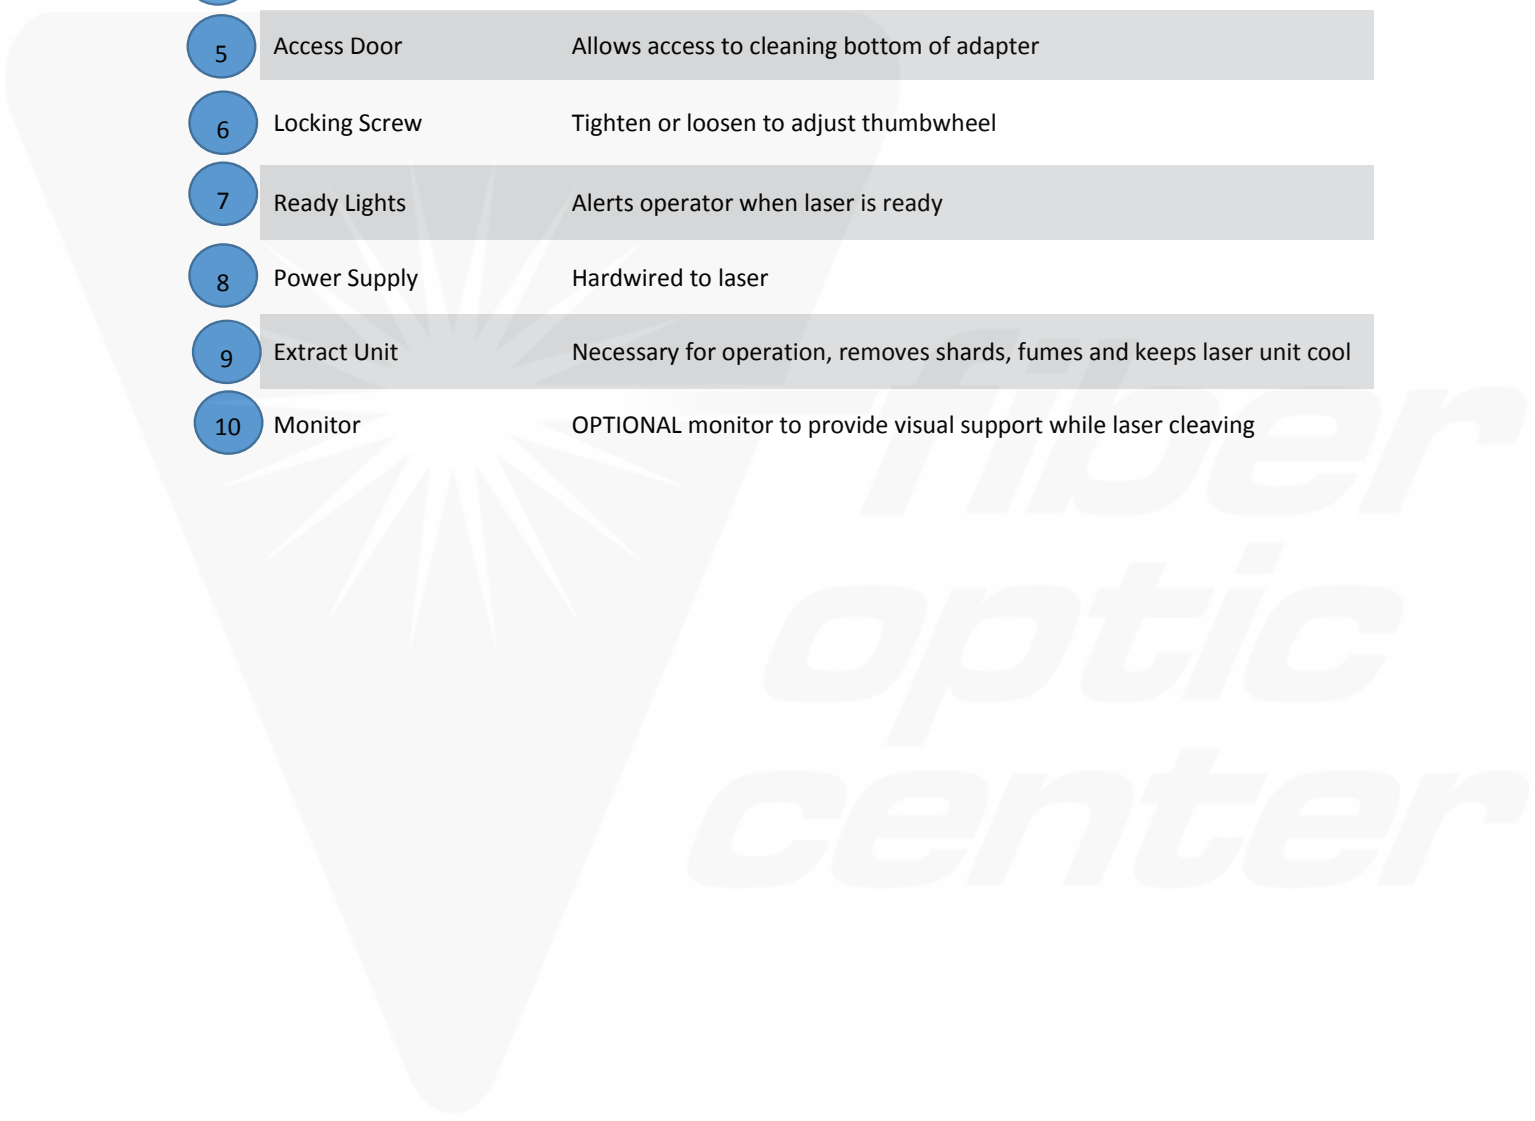


1	Laser Unit	OS7500P laser unit
2	PRIZM® Adapter	Easily positions multiple rows of optical fiber
3	Height Adjustment Knob	Adjusts cleave length between fiber rows
4	Thumbwheel	Allows for adjustment of cleave length
5	Access Door	Allows access to cleaning bottom of adapter
6	Locking Screw	Tighten or loosen to adjust thumbwheel
7	Ready Lights	Alerts operator when laser is ready
8	Power Supply	Hardwired to laser
9	Extract Unit	Necessary for operation, removes shards, fumes and keeps laser unit cool
10	Monitor	OPTIONAL monitor to provide visual support while laser cleaving

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product data subject to change without notice. FOC last update 4/16/2026.

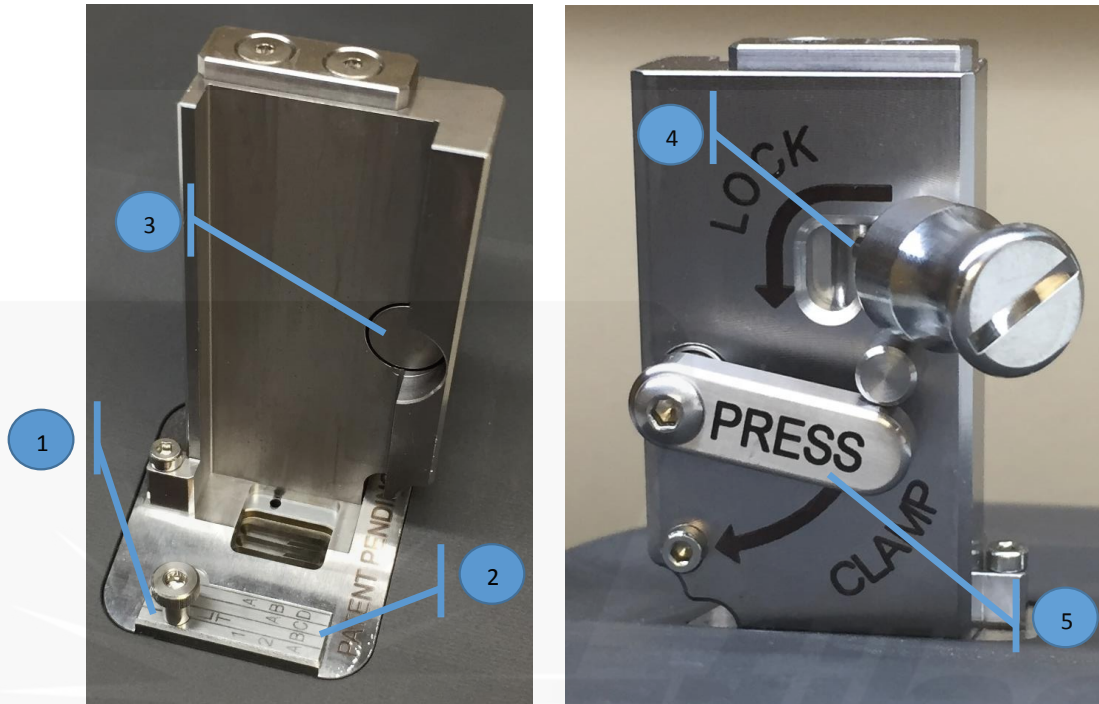


1	Adapter Slide	Positions the ribbon fibers for cleaving.
2	Adapter Slide Positions	Locates the Adapter Slide for the different cleaving positions.
3	Clamp	Cam Clamp holds 16mm wide ribbon holders in the adapter. Has a replaceable rubber ring.
4	Adapter Slide Lock Pin	Locks the Adapter Slide in the different slide positions. If only cleaving one row, this can be removed when in the lock position using a small coin.
5	Clamp Lever	Press the lever in to raise the clamp and rotate to actuate.

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

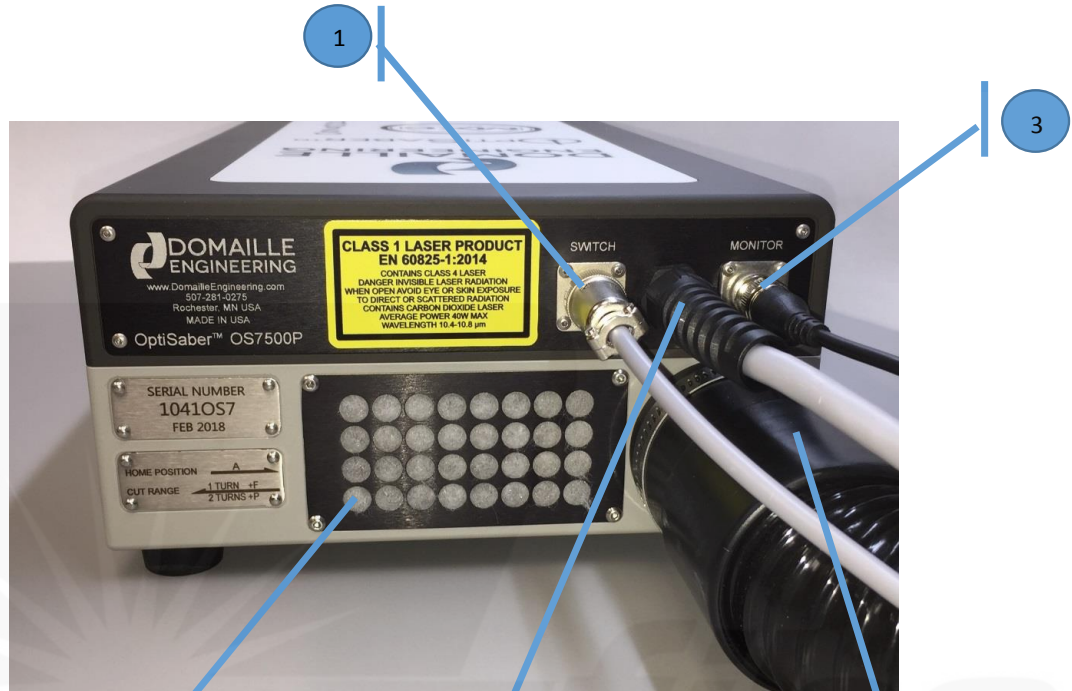

- |   |                           |                                                                                                |
|---|---------------------------|------------------------------------------------------------------------------------------------|
| 1 | Trigger Switch Connection | Foot or hand switch available, initiates cut cycle                                             |
| 2 | Power Cord                | Power cord hard wired to the power supply provides electricity from power supply to laser unit |
| 3 | BNC Output                | BNC output port for OPTIONAL monitor                                                           |
| 4 | Extract Unit Hose Output  | Connection between laser unit and extract hose                                                 |
| 5 | Air Filter                | Keeps air particles from entering laser                                                        |

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA


## Laser Operation

### Start-up Procedure

Due to a small amount of laser output on startup it is recommended that no fibers are loaded in the OptiSaber® at this point.

*IMPORTANT: an extract unit must always be connected and working when the module is in use. Failure to do so will void the warranty.*

1. The fume extract unit must be turned on using the green button on unit.
2. To start the laser unit, connect the power cord to the power outlet. If your power cord is equipped with a yellow GFCI plug, you MUST push the reset button on the plug to supply power to the machine.
3. Turn on the switch on the power supply module.
4. If monitor is being used, plug into power outlet and turn on.

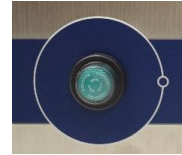

### Operating the Laser

To begin operations, set dial on Extract Unit between 75% -100% based on ambient temperature.

When the machine has been switched on all cycle lights illuminate, then the fault and laser emission LEDs will flash blue and white respectively as the laser warms up. A single Green LED on the top panel will indicate that the unit is ready.



Refer to Domaille Document Number OS7500P-PLT for instructions to prepare, load & cleave ribbonized fiber for US Conec Prizm® Light Turn Connectors.

Refer to Domaille Document Number OS7500P-PMT for instructions to prepare load & cleave ribbonized fiber for US Conec Prizm® MXC Connectors.


### Cut Length Adjustments

The OptiSaber® comes pre-set with a cleave length of approximately 5.7mm from a standard ribbon holder, each line graduation on the thumbwheel represents an approximate 10µm adjustment.

Adjusting this length can be done in a few simple steps.

1. Loosen the locking screw which is located directly above the thumbwheel.
2. Rotate thumbwheel to achieve desired cleave length. Turning to the left will shorten the fiber length, to achieve a longer cut length, rotate the adjustment wheel to the right.
3. Tighten locking screw to secure thumbwheel.

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

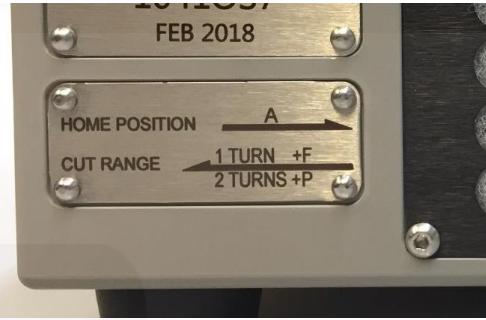

Each OptiSaber® OS7500P has a Home Position and a Cut Range recorded on the back of the machine. Operating outside of the Cut Range could result in damage to adjacent rows of fibers if set too high when cutting multiple rows or blocking the beam path causing fibers to not to be cleaved if set too low. Follow these steps to get the machine back in the Cut Range:

1. Place the Height Adjustment Knob in the "A" position.
2. Loosen the locking screw, located directly above the thumbwheel.
3. Rotate thumbwheel to the right until it contacts the stop. This is the "Home Position" and the position on the thumbwheel should match the position recorded on the back of the machine case.
4. The first position recorded on the Cut Range is the Upper Limit or the longest possible cleave. Rotate the thumbwheel to the left by the number of full turns recorded on the tag and continue turning to the letter. ( i.e. rotate left 1 turn to F)
5. The second position is the Lower Limit or the shortest possible cleave. Rotate the thumbwheel to the left by the number of full turns recorded on the tag from the Home Position (not located from the Upper Limit position) and continue turning to the letter. ( i.e. rotate left 2 turns to P)

## Laser Shut Down

The following procedure should be used to shut down the OptiSaber® OS7500P.

1. Turn off power supply module switch.
2. Using green button, turn off extraction unit.
3. For additional security, unplug electrical cords from power outlets.



---

**Always ensure that any hazard has been removed before the machine is restarted. Staff of a suitable level of responsibility and training should be involved in the decision to restart following emergency shutdown.**

---

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

## Laser Maintenance

Proper care and handling of the laser unit, power supply, and extract unit is critical to maintaining efficient operation. If the laser unit or components are damaged in any way, contact Domaille Engineering.

**There are no serviceable parts inside the laser unit. Do not remove sealed screws. Evidence of tampering will void warranty.**

### Daily or More Often as Required

1. Ensure correct operation of the extract and cooling system.
2. Ensure fans on laser, power supply, and extract unit remain unobstructed.
3. Check Extraction Unit filter. If cleaning or change is needed, follow instructions in Extract Unit manual.
4. Clean Adapter Unit as needed following instructions below.

### Cleaning Adapter Unit

Before any maintenance is to be performed, the OptiSaber® must be properly powered down and unplugged from all power sources.

1. Throughout the day, clean the top side of the adapter by inserting the cleaning brush to clear debris from inside adapter.
2. Occasionally, the bottom of the adapter will need to be cleaned. There is a door on the front of the OptiSaber® to enable cleaning bottom of the adapter. *When the door is open, there is a physical block to prevent laser radiation from exiting the machine.*



Step 1: Remove the screw for the cleaning door using a 2.5mm Allen wrench



**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Step 2: Pull out and rotate the door clockwise to open



Step 3: Clean the bottom of the adapter with the supplied angled cleaning brush. Replacement brushes can be ordered from Domaille Engineering, please contact customer service.



### **Monthly**

Inspect fan filters on the back of the laser, power supply, and extract unit. Vacuum to clean or remove and clean with compressed air.

*fiber  
optic  
center*

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

## Troubleshooting

A red warning light indicates an operating fault in the laser unit. The user should follow the standard shut down procedure (page 15) to power off the OptiSaber®.

Repeating Fault Beep	Explanation	Remedy
1 short	One or both of the two cover switches is open	Check cleaning access door to ensure it is closed
2 short	Laser internal temperature is above 50°C (122°F) or laser error	Refer to over temperature section (p. 17)
3 short	Scanner plate is above 50°C (122°F)	Refer to over temperature section (p. 17)
4 short	Air Temperature inside the laser unit is above 50°C (122°F)	Refer to over temperature section (p. 17)
5 short	Laser voltage error feedback from laser	Contact Domaille
1 long, 1 short	Start Button Fault	Start button may be stuck, check switch operation
2 long, 1 short	Laser Not Ready	Restart Laser
2 long, 2 short	Opto-sensor not broken by scan arm	Restart laser; Contact Domaille

### Over Temperature

The laser can go over temperature when the ambient temperature is above 86°F (30°C). Follow shut-down procedure to allow the laser unit to cool (page 15).

Ensure the vacuum hose seal is tight and properly extracting the warm air from the laser. Increase extraction unit power to 100%.

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

## Service & Support

### Technical Specifications

Laser Height:	6.6 inches (170 mm)
Laser Width:	8.9 inches (225 mm)
Laser Depth:	21.2 inches (538 mm)
Extract Unit Size:	12.1x11.6x14.4 inches (308x294x366 mm) (LxWxH)
Extract Unit Weight:	37.5 lbs (17 kg)
Power Supply Size:	14.4 x 5 x 3.5 inches (360x127x89mm) (LxWxH)
Power Requirements for Laser:	Single Phase, 110-240VAC, 50/60Hz
Power Requirements for Extract Unit:	110-240VAC, 50/60Hz
Laser Cooling:	Air Cooled
Extract Unit Capacity:	Approx. 1 Million Shards
Machine Weight:	33 lbs (15 kg)
Shipping Weights, Laser Unit & Extract Unit:	70 lbs (32 kg) & 40 lbs (19 kg)
Typical Process Time:	3-4 seconds
Temperature Range:	41°F-86°F (5°C-30°C)
Maximum Altitude	6500 feet above sea level (1828M)
Maximum Humidity	20-85% non-condensing
Noise Emission level	Less than 55.0dBA Extract unit measurement at 100%

### CE Notice (European Union)

Marking by the symbol CE indicates compliance of the OS7500P to the following directives of the European Union:

BS EN 61326:2006 Electrical equipment for measurement, control and laboratory use. EMC requirements. General requirements.

BS EN 60204-1:1998 Safety of machinery-Electrical equipment of machines Part 1. (Complying with the Low voltage directive 2006/95/EC).

BS EN 61010-1:2001 Safety requirements for electrical equipment for measurement, control and laboratory use. General requirements.

BS EN 60825-1:2007 Safety of laser products.

Year of CE Marking: 2015

#### EU representative:

OpTek,  
12-14 Blacklands Way, Abingdon Business Park, Oxford, OX14 1DY, UK

**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA