



**Manufacturer:**  
ÅngströmLink™

**Product Name:**  
ÅngströmLink™ AL-2264 High Refractive Index  
Optical Coating(250ml Bottle)

**Manufacturer Part Number:**  
AL-2264-250CC



▶ [Click here for more details on the ÅngströmLink™ AL-2264 High Refractive Index Optical Coating \(250ml Bottle\)](#)

## ÅngströmLink™ Optical Polymers AL-2264 High Refractive Index Optical Coating for Photonic Applications

### ÅngströmLink™ Key Features

- 1.64 refractive index
- No Metals or Nanoparticles
- No High Temperature Processing
- Chemically Resistant

ÅngströmLink AL-2264 is a high purity, transparent polymer coating designed specifically for coating of optical and photonic components. The product is a polymer suspended in an evaporative solvent; evaporation of the solvent leaves behind the amorphous coating. This coating contains no metals or nanoparticles, and does not require any high temperature sintering to achieve high refractive index. The coating may be applied by dip coating, draw down, printing, or casting on a substrate. The refractive index of the dried coating layer is 1.64.

AL-2264 comes in one standard concentration which can be diluted to achieve lower viscosities/thinner coating layers. ALS-2264 (the AL-2264 solvent, sold separately) may be used to dilute the standard concentration of AL-2264. Typical coating thicknesses range from sub-micron to tens of microns.

Maximum operating temperature is 115°C. AL-2264 is packaged in UV protected bottles; standard amount is 100ml.

### Applications

- Hard, high refractive index (1.64) coatings
- Optically clear barrier film, chemically resistant
- Emissive displays
- Optical sensors
- Integrated optical circuits
- LEDs and photo detecting devices

### Benefits

- High refractive index  
Enables light gathering/emitting
- Liquid form  
Allows easy application by casting, dip-coating, spray-coating or various ink-printing processes
- Slow solvent evaporation rate  
Improves concentration stability of open coating baths
- High solvent boiling point (~160°C)  
Eliminates cratering and pinholes in finished coating

ÅNGSTRÖMLINK™ is a trademark of Fiber Optic Center, 23 Centre St., New Bedford, MA 02740 USA




**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product specifications and data are subject to change without notice. FOC last update 3/30/2026.

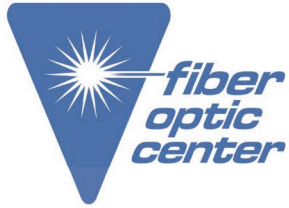

**Manufacturer:**  
ÅngströmLink™

**Product Name:**  
ÅngströmLink™ AL-2264 High Refractive Index  
Optical Coating(250ml Bottle)

**Manufacturer Part Number:**  
AL-2264-250CC



▶ [Click here for more details on the ÅngströmLink™ AL-2264 High Refractive Index Optical Coating \(250ml Bottle\)](#)

*ÅngströmLink™ Optical Polymers*  
*AL-2264 High Refractive Index Optical Coating for Photonic Applications*

Property (at 25°C unless noted)	Test Method	Typical Value
<i>Deposition Processing Characteristics</i>		
Standard Coating Viscosity 165-170 cst Carrier Solvent Specific Gravity 0.94 Carrier Solvent Boiling Point ~160 °C Percent Solids 20% Maximum Particle Size 0.5 μ		165-170 cst 0.94 ~160 °C 20% 0.5 μ
<i>Dried Mechanical Properties</i>		
Tensile Strength Flexural Modulus Flexural Strength Specific Gravity Pencil Hardness Max temp. Water Absorption	ASTM D-1708 ASTM D-1708 2620 MPa ASTM D-1708 120 MPa ASTM D-1217	77 MPa 2620 MPa 120 MPa 1.22 F 115°C 0.21%
<i>Dried Thermal Properties</i>		
Glass Transition Linear Thermal Expansion	DSC 132°C TMA 7 x	132°C 7 x 10 <sup>-5</sup> /°C, est.
<i>Dried Optical Properties</i>		
Appearance Refractive Index, 589 nm Refractive Index vs. Temperature Refractive Index vs. Wavelength	visual ASTM D-1218 prism coupler spectrophotometer	Optically clear 1.64 (chart) (chart) (chart)

ÅNGSTRÖMLINK™ is a trademark of Fiber Optic Center, 23 Centre St., New Bedford, MA 02740 USA



**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

*Product specifications and data are  
subject to change without notice.  
FOC last update 3/30/2026.*



**Manufacturer:**  
ÅngströmLink™

**Product Name:**  
ÅngströmLink™ AL-2264 High Refractive Index  
Optical Coating(250ml Bottle)

**Manufacturer Part Number:**  
AL-2264-250CC



▶ [Click here for more details on the ÅngströmLink™ AL-2264 High Refractive Index Optical Coating \(250ml Bottle\)](#)

*ÅngströmLink™ Optical Polymers*  
*AL-2264 High Refractive Index Optical Coating for Photonic Applications*

## Substrate Compatibility and Preparation

The solvents in AL-2264 have some ability to dissolve some plastics. If working with a plastic substrate it is recommended to check the compatibility of these solvents with the plastic being used (refer to tables of solvent/plastic compatibility), or plan on verifying this compatibility with your own experiments. Refer to the SDSs for AL-2264 or ALS-2264 for specifics on the chemicals involved.

Substrates should be free of dust, oil, and fingerprint soils. Clean substrates using suitable techniques for cleaning optics. If hydrocarbon solvent cleaning is used, a final rinse with reagent grade isopropanol is recommended. If aqueous detergent cleaning is used, multiple final rinses with de-ionized water or a single rinse with reagent grade isopropanol is recommended.

## Deposition Processing

AL-2264 is filtered prior to packaging, to a maximum particle size of 0.5 $\mu$ . AL-2264 may be applied to a substrate by casting, spin-coating, dip-coating, draw down, spray-coating, or various ink-printing processes. The coating can be dried by baking at 100°C for 15 minutes. Higher temperatures are not recommended for reasons of softening the polymer coating and boiling of the solvent, which can cause pin holes and craters in the finished coating. Complete removal of the carrier solvent is essential to achieve the final material properties indicated in the material properties table.

The standard polymer concentration gives a layer thickness of 1 to 5 $\mu$  using a draw down technique. Dip coating gives a ~10 - 30 $\mu$  coating thickness. If thicker coating layers are desired they should be made by applying multiple layers of AL-2264. For deposition processes using multiple coats it may be desirable to use a post processing annealing step, cycling the temperature slowly to ~130°C and then back down, in order to remove interlayer stresses and prevent the formation of fracture lines. For thinner layers see the section on SOLVENT DILUTION. For processing purposes, keep in mind that solvent removal (drying of the coating) from thin layers will happen much quicker than thicker layers.

ÅNGSTRÖMLINK™ is a trademark of Fiber Optic Center, 23 Centre St., New Bedford, MA 02740 USA




**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product specifications and data are  
subject to change without notice.  
FOC last update 3/30/2026.

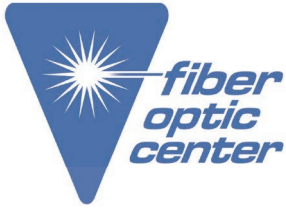

**Manufacturer:**  
ÅngströmLink™



**Product Name:**  
ÅngströmLink™ AL-2264 High Refractive Index  
Optical Coating(250ml Bottle)

**Manufacturer Part Number:**  
AL-2264-250CC



▶ Click here for more details on the ÅngströmLink™ AL-2264 High Refractive Index Optical Coating (250ml Bottle)

### ÅngströmLink™ Optical Polymers AL-2264 High Refractive Index Optical Coating for Photonic Applications

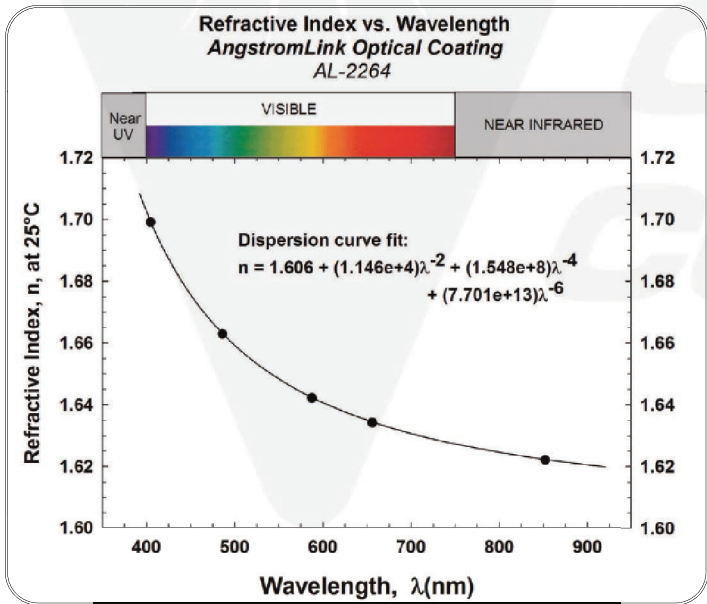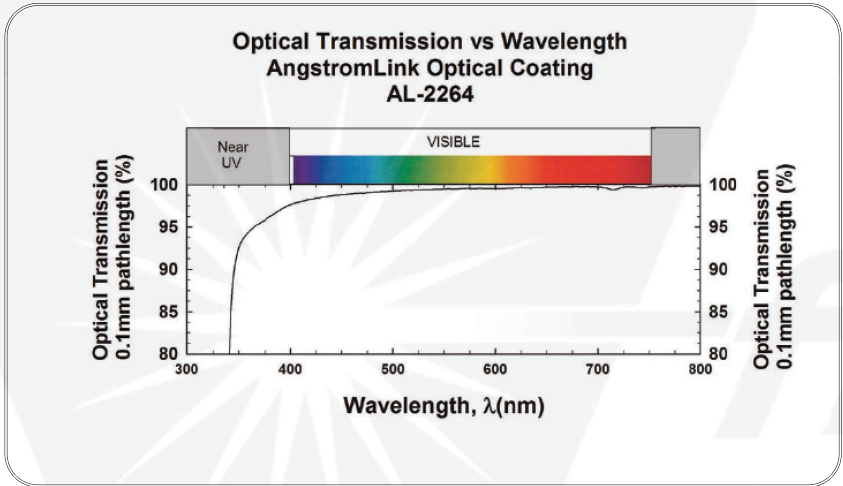

#### Solvent Dilution or Concentration

The standard concentration of AL-2264 is 20%, which is near the upper concentration limit for this solvent/solute system. In the event that the user requires a more dilute concentration, Fiber Optic Center offers the solvent, ALS-2264, separately. It is easy to dilute, by weight, and maintain track of the % concentration of solute. Depending on the coating method, one can adjust the AL-2264 concentration to repeatedly achieve the final coating thickness desired with a single coating application.

Concentration of the original AL-2264 solution for thicker layer thicknesses is not recommended. If thicker coating layers are desired, application of multiple layers of AL-2264 is recommended.

ÅNGSTRÖMLINK™ is a trademark of Fiber Optic Center, 23 Centre St., New Bedford, MA 02740 USA



**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product specifications and data are subject to change without notice. FOC last update 3/30/2026.



**Manufacturer:**  
ÅngströmLink™

**Product Name:**  
ÅngströmLink™ AL-2264 High Refractive Index  
Optical Coating(250ml Bottle)

**Manufacturer Part Number:**  
AL-2264-250CC



▶ [Click here for more details on the ÅngströmLink™ AL-2264 High Refractive Index Optical Coating \(250ml Bottle\)](#)

## ÅngströmLink™ Optical Polymers AL-2264 High Refractive Index Optical Coating for Photonic Applications

### Cleanup

Wet or partially dried portions of AL-2264 may be removed from surfaces by first wiping off excess material with a suitable link-free paper or cloth wipe and then using a wipe soaked with a suitable reagent grade solvent – acetone, toluene, MEK. Fiber Optic Center offers ÅngströmLink ALS-2264, the solvent system for AL-2264, also for this purpose. Dried AL-2264 coatings can be removed using toluene, MEK or ALS-2264. Use a suitable soaked wipe and allow time for the solvent to dissolve the coating. The user is responsible for compliance with all applicable local, state, and federal regulations governing disposal of waste materials as indicated in the SDS.

### Packaging

AL-2264 comes in UV protected bottles. The standard size is 100ml, but other size options, i.e. 50ml, 200ml and 500ml, are available upon request.

### Shelf Life and Storage

AL-2264 is an inert composition with no intrinsic shelf life limitations. Due to the evaporative solvent, the bottle must be tightly sealed at all times. It should also be stored away from light at typical room temperature, and not be contaminated with other fluids, or particles of dust or dirt.

### Specifications

The typical properties quoted on this product data sheet should not be used as a basis for preparation of product specifications. Consult Fiber Optic Center for assistance with establishing specification limits and test conditions.

### Warranty

AL-2264 is sold without warranty, express or implied. Fiber Optic Center expressly disclaims any liability for incidental or consequential damages resulting from use of this product.

### Safety

Consult the Safety Data Sheet (SDS) for AL-2264 before use. AL-2264 is an industrial product, designed for use only by qualified laboratory or production personnel.

ÅNGSTRÖMLINK™ is a trademark of Fiber Optic Center, 23 Centre St., New Bedford, MA 02740 USA

For Special Quotes and Technical Consultations Please Contact:  
Kelly Barker, Fiber Optic Center: [kbarker@focenter.com](mailto:kbarker@focenter.com)



**Contact the professionals at Fiber Optic Center for a quote or to get more details.**

[focenter.com](http://focenter.com) • 508-992-6464 | (800) 473-4237 • [sales@focenter.com](mailto:sales@focenter.com)

23 Centre Street • New Bedford, MA 02740 USA

Product specifications and data are  
subject to change without notice.  
FOC last update 3/30/2026.