



Manufacturer:
Chemtronics

Product Name:
ITW Chemtronics® Chemswab™ Presaturated Alcohol Swabs - 25 Swabs/Box

Manufacturer Part Number:
CS25



Learn More

► Click here for more details on the ITW Chemtronics® Chemswab™ Presaturated Alcohol Swabs - 25 Swabs/Box



Technical Data Sheet

Rev. D (6/21) Page 1 of 2

Chemswab™ Presaturated Swab

Product# CS25

Product Description

Chemswabs Presaturated Swabs are an excellent all around cleaning swab. They are effective for removing a wide variety of light to medium soils from instruments, equipment and devices. The strong yet gentle cleaning strength of IPA and tough yet soft polyurethane foam makes it a safe choice for removing handling soils, ink, and most other common contamination from most sensitive surfaces. They are versatile cleaning tools for uncoated glass, most plastics and metals.

Chemswab Presaturated Swabs contain ultra-pure isopropyl alcohol (91% IPA / 9% Pure Water) on a urethane foam swab.

- Plastic safe
- Dries fast
- Leaves no residue
- Nonabrasive
- Upper ozone safe; CFC/HCFC free

Typical Applications

Chemswab cleans and degreases:


- Instruments and devices
- Electronic, electrical and mechanical equipment
- Cabinets and housings



Typical Product Data and Physical Properties

Solubility in Water:	Soluble
Specific Gravity:	0.81
Evaporation Rate: (ether =1)	<1
Appearance:	Clear, colorless liquid
Flash Point (TCC):	61° F (16.1°C)
Shelflife	2 years
RoHS Compliant	Yes

HANDLE: 1786B SBC #147 WHITE POLYPROPYLENE
MITT: A1455 3/16" WHITE CUSTOM FOAM
ADHESION: HOT MELTED HANDLE 1.4 LB. PULL

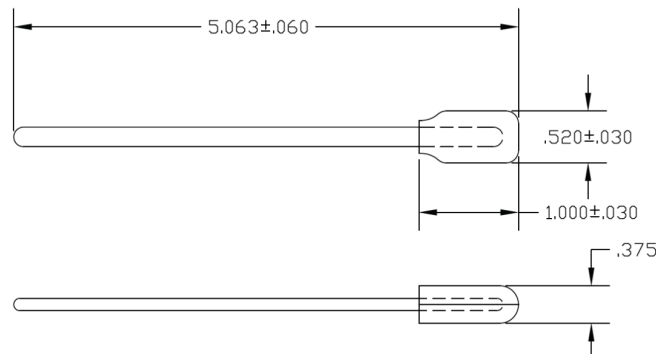

Contact the professionals at Fiber Optic Center for a quote or to get more details.

focenter.com • 508-992-6464 | (800) 473-4237 • sales@focenter.com

23 Centre Street • New Bedford, MA 02740 USA

Product specifications and data are
subject to change without notice.



Manufacturer:
Chemtronics

Product Name:
ITW Chemtronics® Chemswab™ Presaturated Alcohol Swabs - 25 Swabs/Box

Manufacturer Part Number:
CS25

▶ [Click here for more details on the ITW Chemtronics® Chemswab™ Presaturated Alcohol Swabs - 25 Swabs/Box](#)

Technical Data Sheet

Rev. D (6/21) Page 2 of 2

Chemswab™ Presaturated Swab

Product# CS25

Compatibility

Chemswab Presaturated Swabs are generally compatible with most plastics, glass and metals. Compatibility must be checked with all antiglare coatings. As with any chemical product, component compatibility must be determined on a non-critical area prior to use.

Material	Compatibility
Aluminum	Excellent
Buna-N	Good
CPVC	Excellent
Epoxy	Excellent
Neoprene	Good
Noryl®	Excellent
Phenolic	Excellent
Cross-Linked PE	Good
Polycarbonate	Poor
Polypropylene	Good
Polystyrene	Poor
PVC	Fair
Teflon™	Excellent
Tygon™	Good
Viton™	Excellent

Usage Instructions

For industrial use only. Read SDS carefully prior to use.

Remove wipe from packet and lightly wipe away any dust or contaminants from surfaces. Allow surface to dry completely before use.

Availability

CS25 50 Premoistened Swabs
individually packaged

Environmental Impact Data

CFC	0.0%
HCFC	0.0%
CL Solv.	0.0%
VOC	91%
HFC	0.0%
ODP	0.0

CFC, HCFC, CL SOLV., VOC, and HFC numbers shown are the content by weight. Ozone depletion potential (ODP) is determined in accordance with the Montreal Protocol and U.S. Clean Air Act of 1990. The ODP of this product is zero.

Note:

This information is believed to be accurate. It is intended for professional end users having the skills to evaluate and use the data properly. CHEMTRONICS does not guarantee the accuracy of the data and assumes no liability in connection with damages incurred while using it.

Contact the professionals at Fiber Optic Center for a quote or to get more details.

focenter.com • 508-992-6464 | (800) 473-4237 • sales@focenter.com

23 Centre Street • New Bedford, MA 02740 USA

*Product specifications and data are
subject to change without notice.*